

DALISYS INFORMATION SHEET




- Mandatory IT infrastructure -

DALISYS

STAGES and ROLES

STAGES:

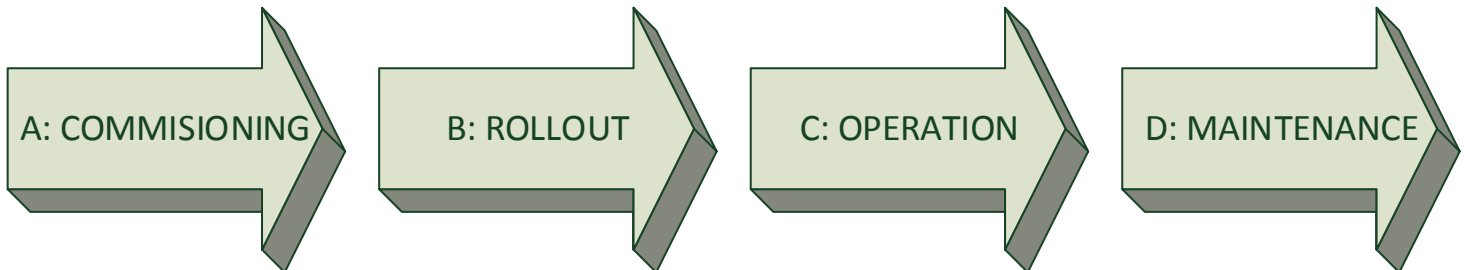


ROLES:




BEG STAFF

Super Admin rights – Full access (Router & ViSTATION)

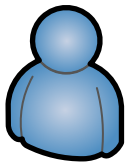


Manager

Manager rights – Access to Energy Monitor, Emergency Lights Manager, Calendar, Messaging Manager, Easy Maintenance Tools...

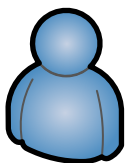


User-Admin

User-Admin rights – Access to the ViSTATIONS user administration interface. A „User-Admin“ can create and delete user groups and accounts with individual rights.

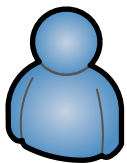

Employee

Employee rights – Restricted access to ViSTATION only. Rights are defined by Role „User-Admin“. An employee can only control the light in allowed areas in the building.

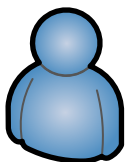


Network Administrator
(Not B.E.G.)

Customer’s Network Administrator – No access to DALISYS Router and DALISYS ViSTATION. Maintains local IT networks including Ethernet platform for DALISYS. Important contact person for B.E.G. STAFF. Should/May have „Manager“ rights.




DALISYS lighting control system

- STAGE A: COMMISSIONING -

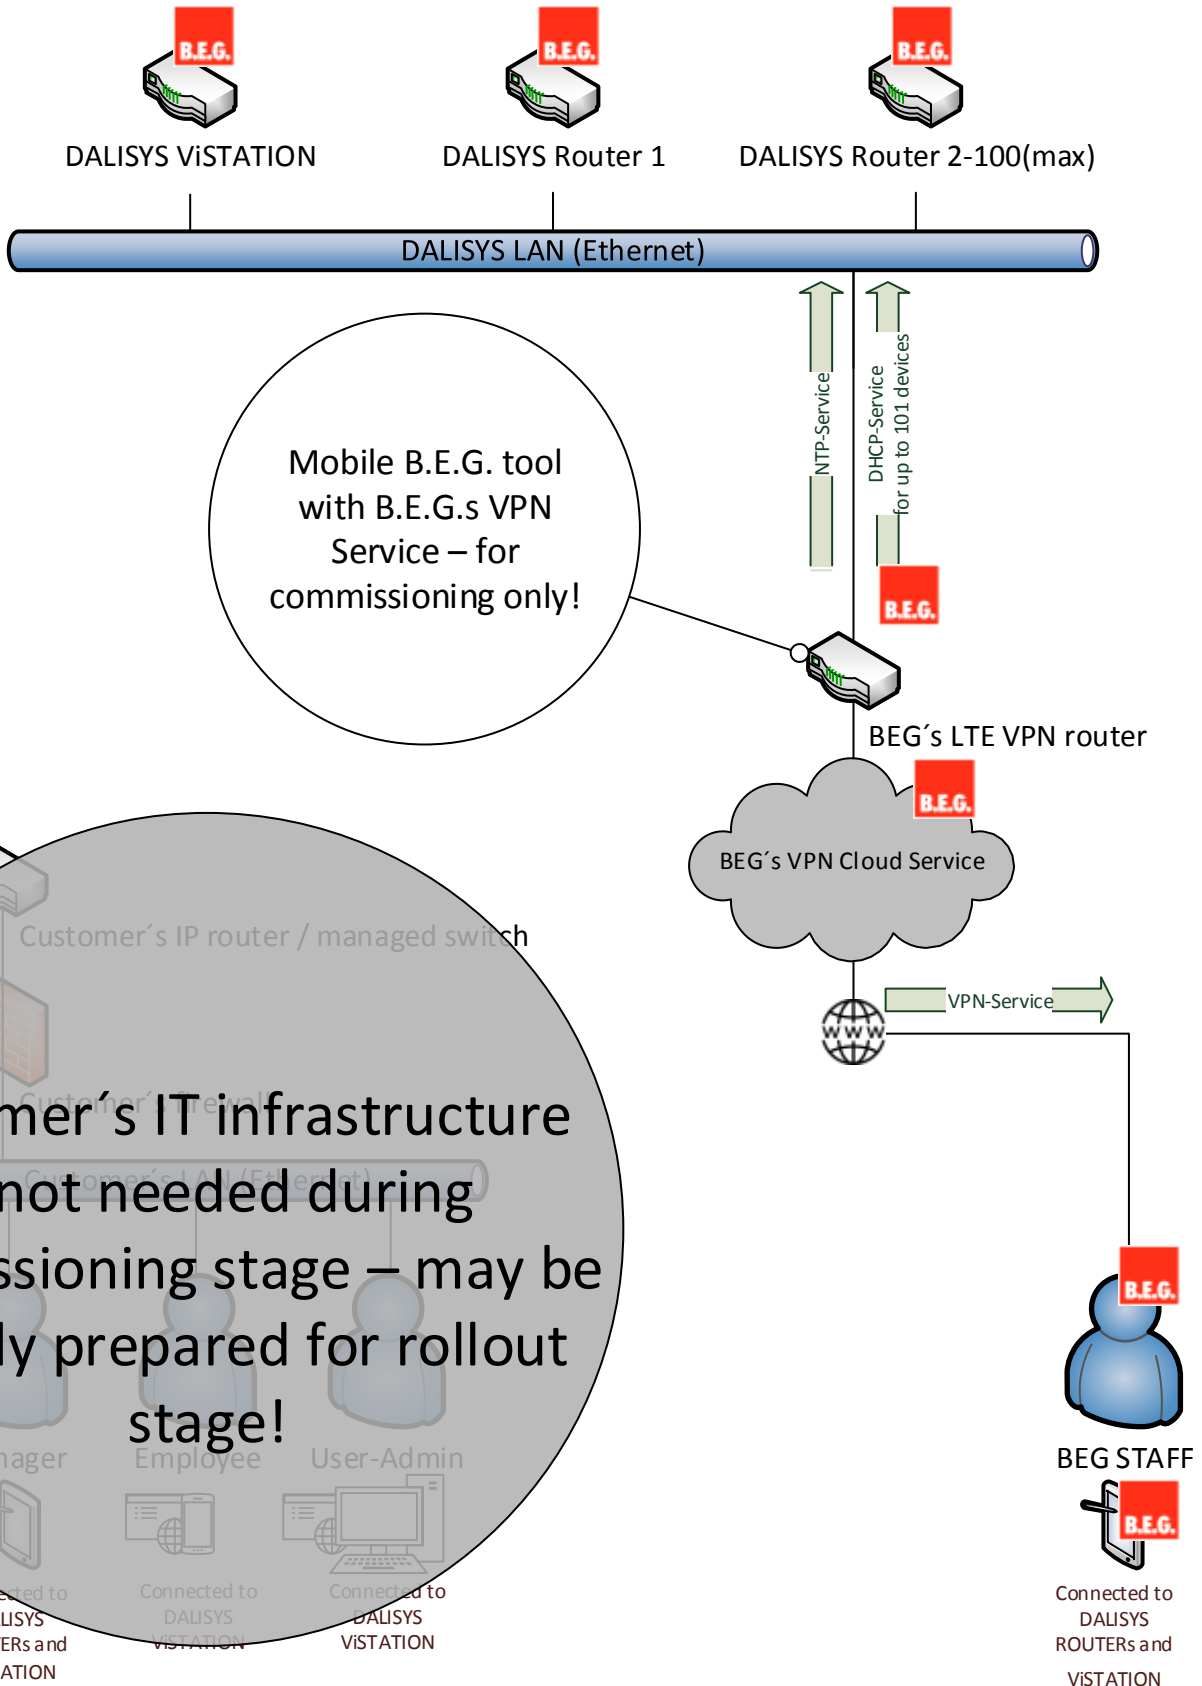


DALISYS lighting control system

- STAGE B: ROLLOUT (up to 6months) -

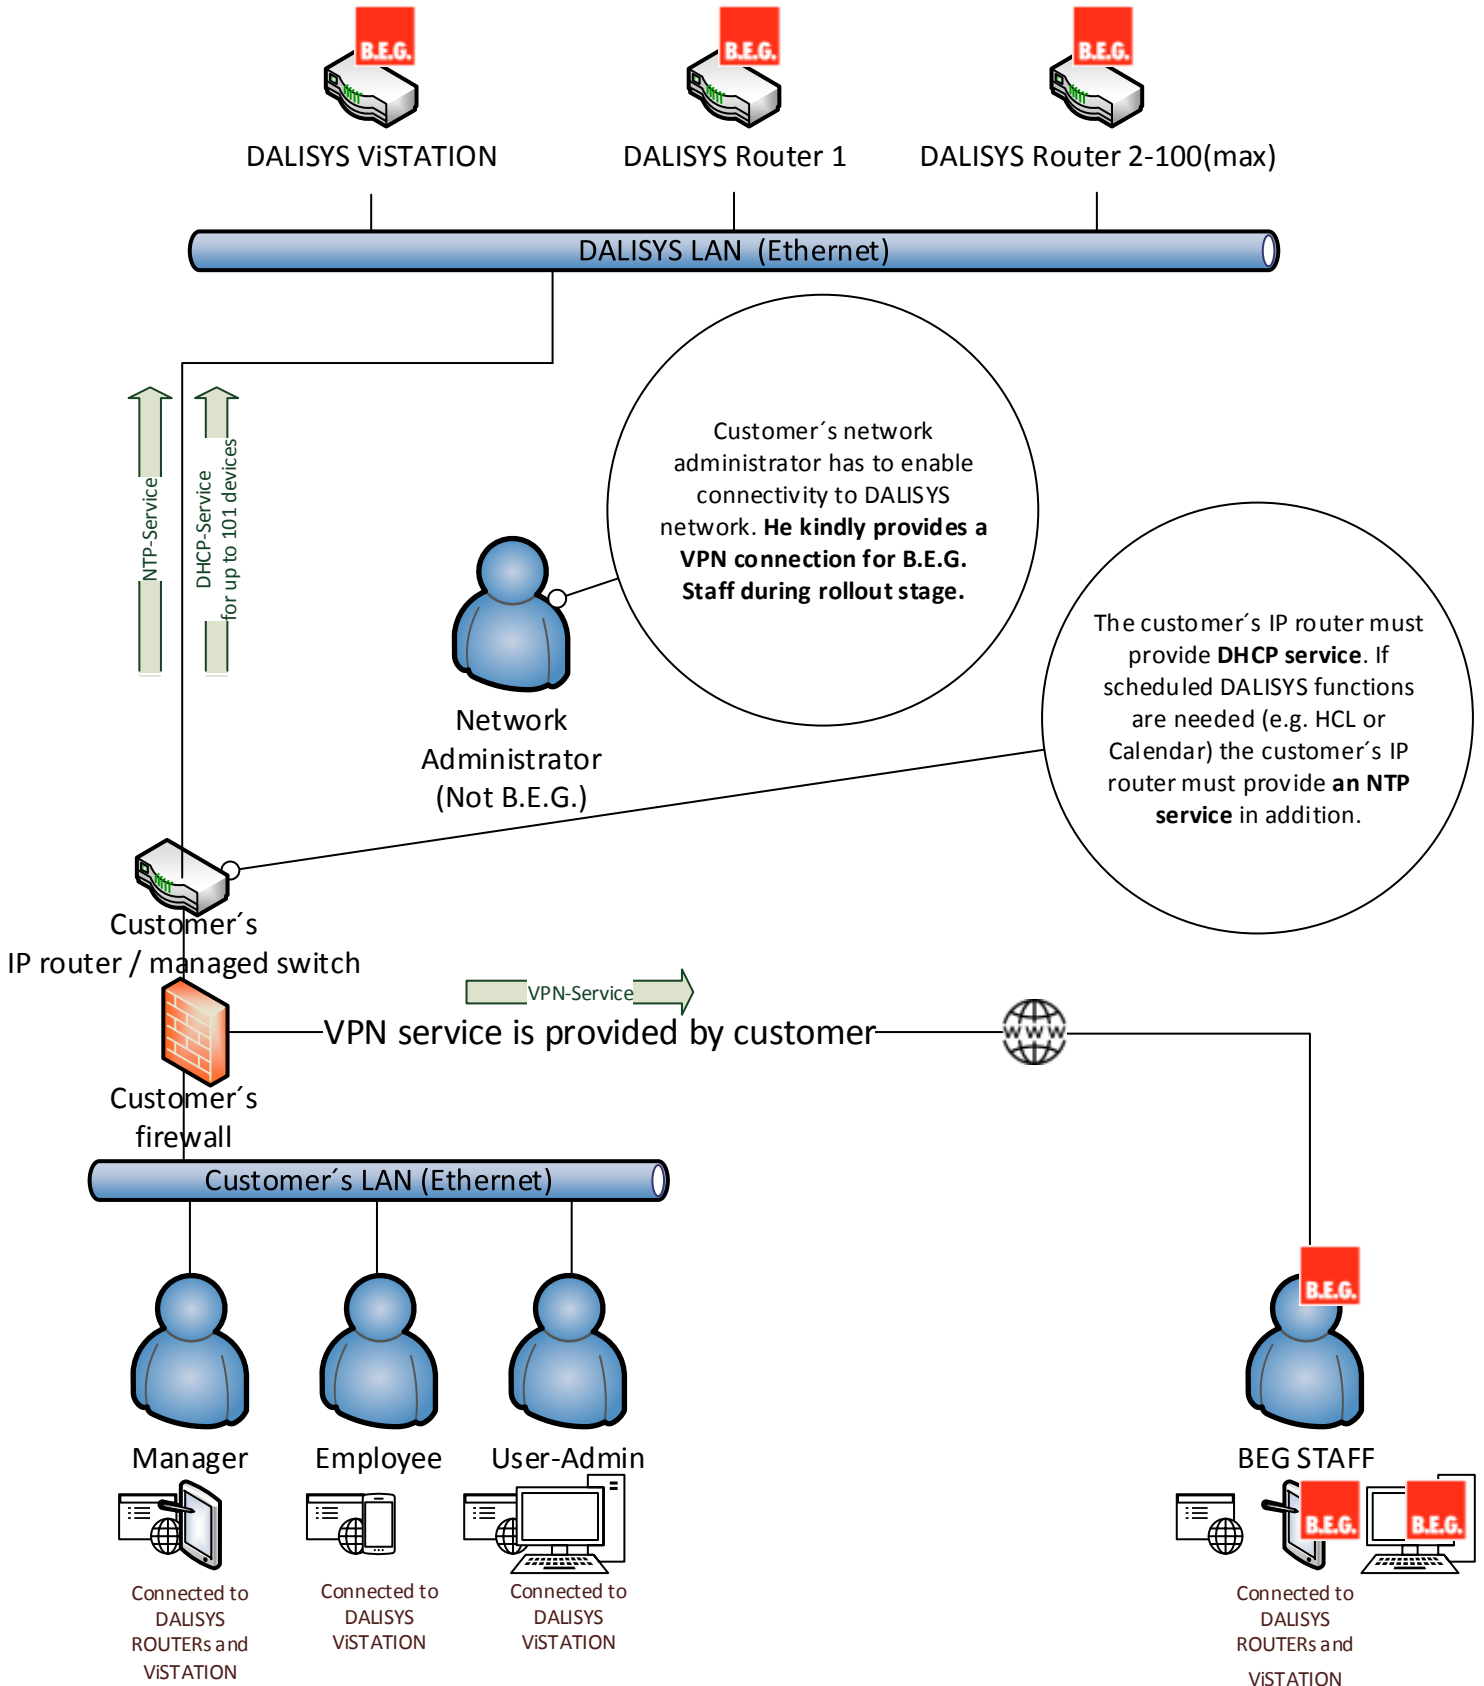

DALISYS lighting control system

- STAGE C: OPERATION -

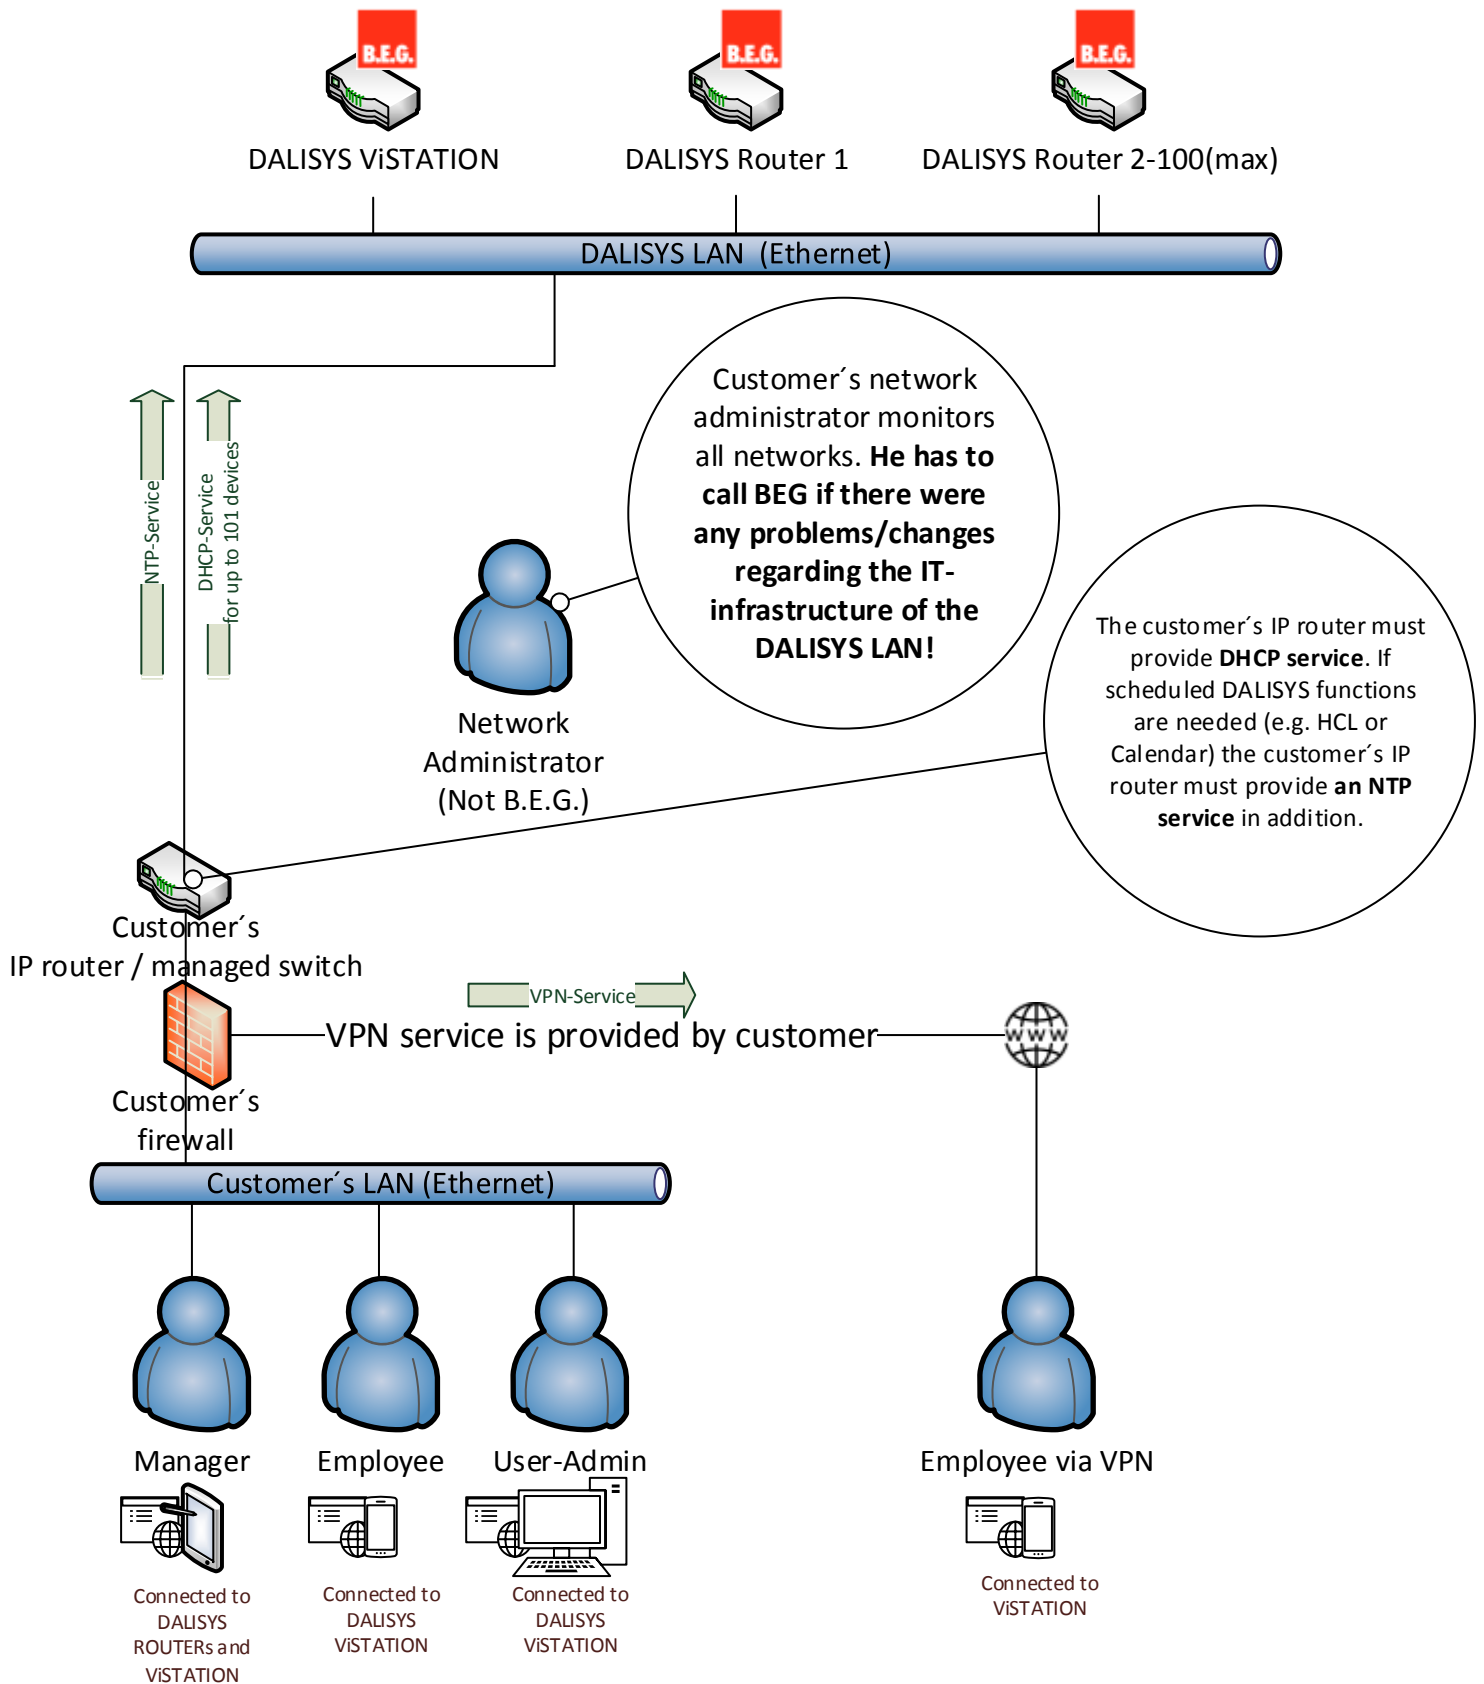

DALISYS lighting control system - PHASE D: MAINTENANCE (/REMOTE) -

