

Switching actuator KNX RF Secure

Application description

SA1-230 / 16 / H / RF-KNXs

All device data can also be found here:



<https://www.beg-luxomat.com/en-in/products/control-systems/knx-rf/>

© 2024

B.E.G. Brück Electronic GmbH
Gerberstraße 33
51789 Lindlar
GERMANY

Telefon: +49 (0) 2266 90121-0

E-Mail: support@beg.de

Internet: beg-luxomat.com

1 Introduction	5
1.1 General	5
1.1.1 Basic information about the KNX bus	5
1.1.2 Symbolism	5
1.2 KNX Data Secure	5
1.2.1 Commissioning Data Secure	5
1.2.2 FDSK	6
1.2.3 Master reset	6
1.3 System description KNX RF devices	6
1.4 General function of the switch actuator	7
2 Basic functions	8
2.1 Start delay	8
2.2 Commissioning telegram (heartbeat)	8
2.3 Input objects: Switch and central object	8
2.4 Collective feedback signals	8
2.5 Resetting the actuator to the original ETS parameters (reset)	9
3 Telegram repetitions	10
3.1 Settings telegram repetitions	10
3.2 Retransmitter function (repeater function)	10
4 Channel selection	11
4.1 Channel – General settings	11
4.2 Operating hours counter	11
4.3 Switching cycle counter	13
5 Input events / filters	16
5.1 Input objects: Switching and central object	16
5.2 Scene function	16
6 Basic functions	18
6.1 Switch-on and switch-off delay	18
6.2 Staircase timer	20
6.3 Flashing function	23
7 Logic functions	24
7.1 Links	25
7.1.1 Logic functions settings	26
7.2 Locking function	27
7.2.1 Locking function settings	28
7.3 Forced operation	30
7.4 Safety function	31
7.4.1 Safety function settings	32
8 Output / relay behavior	35
8.1 Contact delay function	35

8.2 Contact type35
8.3 Feedback35
9 List of data point types..... 37
10 Care, maintenance and disposal 39
 10.1 Cleaning 39
 10.2 Maintenance 39
 10.3 Disposal 39
11 Diagnosis / Troubleshooting 40
12 Service / Support41
 12.1 Manufacturer’s warranty41
 12.1.1 Product code41
 12.2 Contact details41

1 Introduction

The B.E.G. KNX Secure switching actuator receives and sends KNX telegrams and switches loads. The output, also known as a channel, is switched via a relay and can be individually programmed using the ETS. Logic operations, status feedback, disabling functions, central switching functions and comprehensive time functions such as switch-on/switch-off delays and staircase automation functions as well as a flashing function are available. Scene functions are also available.

1.1 General



1.1.1 Basic information about the KNX bus

A KNX commissioning or project planning course is required to understand these instructions.

In order to be able to work with the B.E.G. applications, they must first be imported into the ETS. ETS version 5 or higher is supported.

1.1.2 Symbolism

In the following application description, various symbols are used for a better overview. These symbols are explained briefly here.

	<p>Caution: This symbol indicates text passages that must be read in order to avoid errors during project planning and commissioning.</p>
	<p>Recommendation: This symbol indicates parameter settings that experience has shown lead to optimum device utilisation.</p>

1.2 KNX Data Secure

KNX Data Secure enables the secure commissioning of and communication between devices that support Data Secure. This enables encrypted transmission of group addresses between two devices that support Data Secure. With Data Secure, devices that support Data Secure can also communicate with devices that do not support Data Secure. Mixed operation in a project is therefore possible. However, if all data of a group address are to be transmitted encrypted, all devices whose objects are connected to this group address must support Data Secure.

1.2.1 Commissioning Data Secure

For each device, it can be decided whether the commissioning is to take place secured or unsecured. If the commissioning is not secured, the device is to be used as a normal device without Data Secure. By default, secure commissioning is activated in the ETS for all devices during insertion. This item can be changed by the system integrator under Device → Properties → Settings.

If the message to enter the FDSK for the device appears, you can skip this dialogue with the „Later“ button. Data Secure can also be activated later by activating the „secure commissioning“ and the FDSK is available.

To put Secure devices into operation, proceed as follows:

1. Load product dacardase:

When loading the product dacardase, you will usually be asked directly to enter the FDSK (Factory Default Setup Key, see 1.2.2) of the device.

You can enter the FDSK manually or scan the QR code via camera. If you do not want to read in the FDSK, this can also be done at a later time. To enter the FDSK later, select the respective project and select the Safety card.

Here you can now select the „Add“ button and enter the FDSK or scan the QR code. The FDSK is then decoded into serial number and factory key. The assignment of which key belongs to which device is done automatically by the ETS. Thus, all FDSK used in the project can be entered one after the other.

2. Download the application:

Now the application can be downloaded to the device.

In order to be able to commission devices with Data Secure, at least ETS 5.7 must be used.

1.2.2 FDSK

Each Secure device is delivered with the „Factory Default Setup Key“ (FDSK). Each detector of Generation 7 has an individual FDSK (Factory Default Setup Key). This key is found in the form of a QR code on each device. This key must be entered into the ETS by the system integrator. A device-specific tool key is then generated from this. The ETS sends the tool key via the KNX bus to the device that is to be configured. This transmission is encrypted and authenticated with the FDSK key. After this initial commissioning, the device only accepts the received tool key. The FDSK is no longer required for further transmission unless the device is reset via the master reset. The FDSK of all devices in a project **must** be kept on a project-specific basis.

1.2.3 Master reset

To perform the master reset, the following sequence is required:

- Press the programming button briefly
- Wait 0.5s
- Press the programming button briefly
- Wait 0.5s
- Press the programming button briefly
- Disconnect bus voltage
- Hold down the programming button, connect the bus voltage and hold down for a further 5 seconds.
- Release programming button
- Programming LED lights up briefly

After approx. 20s, the device is ready for communication.

1.3 System description KNX RF devices

The KNX RF system is a manufacturer-independent KNX radio standard that operates in the 868 MHz frequency range. The maximum range is approx. 30 m in buildings and up to 150 m in open spaces. KNX RF devices can be used to expand existing KNX installations without a bus line. They support secure communication on RF, as well as on TP media couplers according to the KNX Secure standard. Wired systems are connected or extended with the RF devices via the media coupler. KNX RF is a bidirectional radio system, so that the devices can both receive and transmit information. As with TP devices, commissioning is carried out by the ETS. Due to the radio technology, additional parameters for configuration are available in the ETS, otherwise RF devices do not differ functionally from TP devices.

ATTENTION:



KNX RF devices are operated on 230V AC mains voltage. The safety instructions according to the operating instructions must be observed.

NOTE



The device's antenna should be pointed in an unobstructed direction for the best possible communication. The position of the antenna is marked on the device.

For more information, see the KNX RF manual:



https://www.beg-luxomat.com/files/downloads/en_GB/download-infomaterial/content/Manual_KNX-RF_en_V1.pdf

1.4 General function of the switch actuator

The function of the switching actuator, switching, is realized via four consecutive blocks in which the respective event is processed:

– **Input events / filters**

An input event is, for example, a push button action. In this block, this input event can then be filtered or inverted according to the object values parameterized for this block. The result obtained in this block is output and represents the input event in the next block. The next block is the

– **Basic functions**

The basic functions of the switch actuator are switching, staircase automation and flashing. Parameters can also be set for these functions. The following block are the

– **Logic functions**

The type of logic operation can be selected here. In addition, the higher-priority (high-priority) disable, forced operation and safety functions can be defined. The output / relay behavior can be defined as a further basis. In particular, the type of contact (normally closed/ normally open) can be defined and the feedback behaviour can be parameterized. The result generated here then determines the switching behavior.

2 Basic functions

The basic functions define the basic functions of the switch actuator.

2.1 Start delay

There is often a large number of actuators in a system. A start delay can be specified for the switching actuator to avoid voltage peaks on mains recovery. This is the time after bus voltage recovery that the switching actuator should wait before resuming its function.

General	
Start delay in seconds	0 – 120 [5]

2.2 Commissioning telegram (heartbeat)

When the switching actuator is ready for operation, it can send a commissioning telegram cyclically. This telegram is monitored by a higher-level unit.

The telegram only indicates that the switching actuator itself is ready for operation. If a channel is defective, e.g. because a relay is „stuck“, this is not reported. The intervals at which this commissioning telegram is sent can also be defined.

General	
Commissioning telegram (heartbeat)	deactivated activated
Cycle time in minutes <small>(only visible during commissioning telegram "activated")</small>	1 – 120 [60]

No.	Name	Function	C	R	W	T	M
437	General output (DPT 1.001)	Commissioning telegram	X	-	-	X	-

2.3 Input objects: Switch and central object

A switching object is assigned to the channel. An input event causes a telegram, the value of which can be parameterised. The input event causes the staircase controller to switch or start, for example.

The central object is a 1-bit object. For each channel, you can specify whether the channel should evaluate the central object or not. A telegram to this object is equivalent to telegrams to the switching object. However, the central function has its own input filters.

The input objects all have the same priority, i.e. the last telegram always prevails.

No.	Name	Function	C	R	W	T	M
433	General input (DPT 1.001)	Central switching	X	-	X	-	-

2.4 Collective feedback signals

There are two feedback options. With active feedback (active feedback object), the relay status is reported each time the bus is switched. With passive status objects, the value is not sent automatically. The value of the object is always current, but must be read out via the bus, e.g. using visualization software. It can be defined here that the feedback from the individual channels is collected. Further explanations can be found in the „Feedback“ chapter.

Collective feedback	deactivated
	active feedback object
	passive status object

No.	Name	Function	C	R	W	T	M
435	General output (DPT 27.001)	Collective feedback 1 (active)	X	-	-	X	-
436	General output (DPT 27.001)	Collective feedback 2 (active)	X	-	-	X	-

No.	Name	Function	C	R	W	T	M
435	General output (DPT 27.001)	Collective feedback 1 (passive)	X	X	-	-	-
436	General output (DPT 27.001)	Collective feedback 2 (passive)	X	X	-	-	-

2.5 Resetting the actuator to the original ETS parameters (reset)

It is possible to change some parameters during operation using bus access (objects). A taught-in value can be protected against changes (ETS download or resetting the actuator). To generally prevent the changed parameters from being reset, this function must be deactivated. If the function is activated, all parameters that are enabled for a reset are reset.

A „1“ telegram to the „Parameter reset“ object resets the actuator to the original ETS values. The values to be reset can be selected for each actuator function.

The parameters also have an influence on the next ETS download. A taught-in value can be protected against changes (ETS download or resetting the actuator).

The following table shows which functions can be reset by the „Parameter Reset“ object („1“ telegram).

Function	Parameters	Reset value
Scene function	Saved scenes by ETS download or object reset	Value input event for Scene A to H
Switch-on delay	Times changed by object through ETS download or object reset	Delay time (hours, minutes, seconds)
Switch-off delay	Times changed by object through ETS download or object reset	Delay time (hours, minutes, seconds)
Staircase timer	Times changed by object through ETS download or object reset	Follow-up time (hours, minutes, seconds)
Operating hours counter	Limit value changed by object via ETS download or object reset	Operating hours limit value in hours
Operating hours counter	Current operating meter reading by ETS download, object reset resettable	0
Switching cycle counter	Limit value changed by object via ETS download or object reset	Switching cycle counter limit value
Switching cycle counter	Current switching cycle counter status can be reset via ETS download, reset object	0

General settings	
Resetting the actuator to the original download parameters	activated
	deactivated

No.	Name	Function	C	R	W	T	M
434	General input (DPT 1.001)	Actuator reset	X	-	X	-	-

3 Telegram repetitions

KNX RF devices have special functions that guarantee the transmission security of telegrams or can improve it in critical cases.

3.1 Settings telegram repetitions

In radio links, it can happen that signals are lost. To minimise this risk, various information can be sent repeatedly. Two blocks are available for telegram repetitions.


Further configuration > Telegram repetitions	
First repetition block	activated
	deactivated
Distance to previous transmission requests in ss.fff [seconds.milliseconds]	00.500 – 04.999 (01.000)
Distance in block in ss.fff [seconds.milliseconds]	00.100 – 05.000 (05.000)
Switching channel uses repeat block	deactivated
	activated
Switching cycle counter uses repeat block	deactivated
	activated
Operating hours counter uses repetition block	deactivated
	activated

Second repetition block	activated
	deactivated
Distance to previous transmission requests in ss.fff [seconds.milliseconds]	05.000 – 20.000 (05.000)
Distance in block in ss.fff [seconds.milliseconds]	00.100 – 05.000 (05.000)
Switching channel uses repeat block	deactivated
	activated
Switching cycle counter uses repeat block	deactivated
	activated
Operating hours counter uses repetition block	deactivated
	activated

3.2 Retransmitter function (repeater function)

To amplify radio signals or to bridge longer radio distances, the retransmitter function can be activated in the ETS. The function can be found in the properties of the device > Settings, below the safe commissioning. To activate it, the checkbox must be ticked.

4 Channel selection

ATTENTION:	
	No channel selection is possible with the 1-channel switching actuator. Accordingly, only „Channel“ is displayed without a channel number.

4.1 Channel – General settings

The behaviour on bus voltage recovery can be selected. However, the possible parameter values do not have a direct effect on the relay, but determine the result of the basic function. The logic functions are the background to this. With the logic functions, it is also possible to define a bus voltage recovery behaviour. This is superordinate to the basic functions. Only if no logic functions have been parameterised do the parameters of the bus voltage recovery behaviour have a direct effect on the switching channel.

Channel: General settings	
Result of the basic function after bus voltage recovery	„0“
	„1“
	no change
	as before bus voltage failure

4.2 Operating hours counter

The operating hours counter can be used to monitor the operating time of a channel. The first step is to define the status to be monitored. How long the connected load has been switched on is the most common user case. To do this, the duration must be measured while the relay is closed.

The duration for which the relay is open can also be measured.

To determine the operating time of the switching actuator itself, you can parameterize that both relay states (closed or open) should be monitored. However, this setting only needs to be selected for one channel; the other channels can monitor the relay states as required. In this way, the number of operating hours of the switching actuator can be determined via the channel that monitors the relay states „closed or open“, while the operating hours of the connected loads are determined for the remaining channels.

The operating hours counter internally counts up an hours counter, the value of which is constantly compared with the operating hours limit value. The operating hours limit value can be set in the parameters from 0 to 100,000 hours. During operation, this value can also be changed via the bus using a 2-byte object. This resets the current operating hours counter. If this limit value is reached, the channel sends a message. This can be a „1“ or „0“ telegram.

If the operating hours counter has reached the operating hours limit value and has reported this on the bus, the operating hours counter must be deleted manually. Only then will the process restart. The operating hours continue to be counted even after the operating hours limit has been reached.

The current operating counter reading can be sent when a change is made. The amount of the change can be selected between 1 and 24 hours.

The message object (operating hours reached) can be sent cyclically. In addition, only a change can be sent here (minimization of the bus load).



When the application is loaded for the first time, the operating hours limit value stored in the parameters is saved in the actuator and the operating hours counter is set to zero.

During operation, the operating hours counter changes and the limit value can be changed using a 2-byte telegram. When the application is reloaded, you can now decide whether the current values should be overwritten by the ETS or not.

The „Parameter reset“ object (basic functions) resets the actuator to defined values. For the operating hours counter, this is the stored operating hours limit value.

B.E.G. LUXOMAT[®] net Switching actuator KNX RF Secure

In the event of a bus voltage failure, the current value of the operating hours counter is not lost. It is restored when bus voltage is restored.

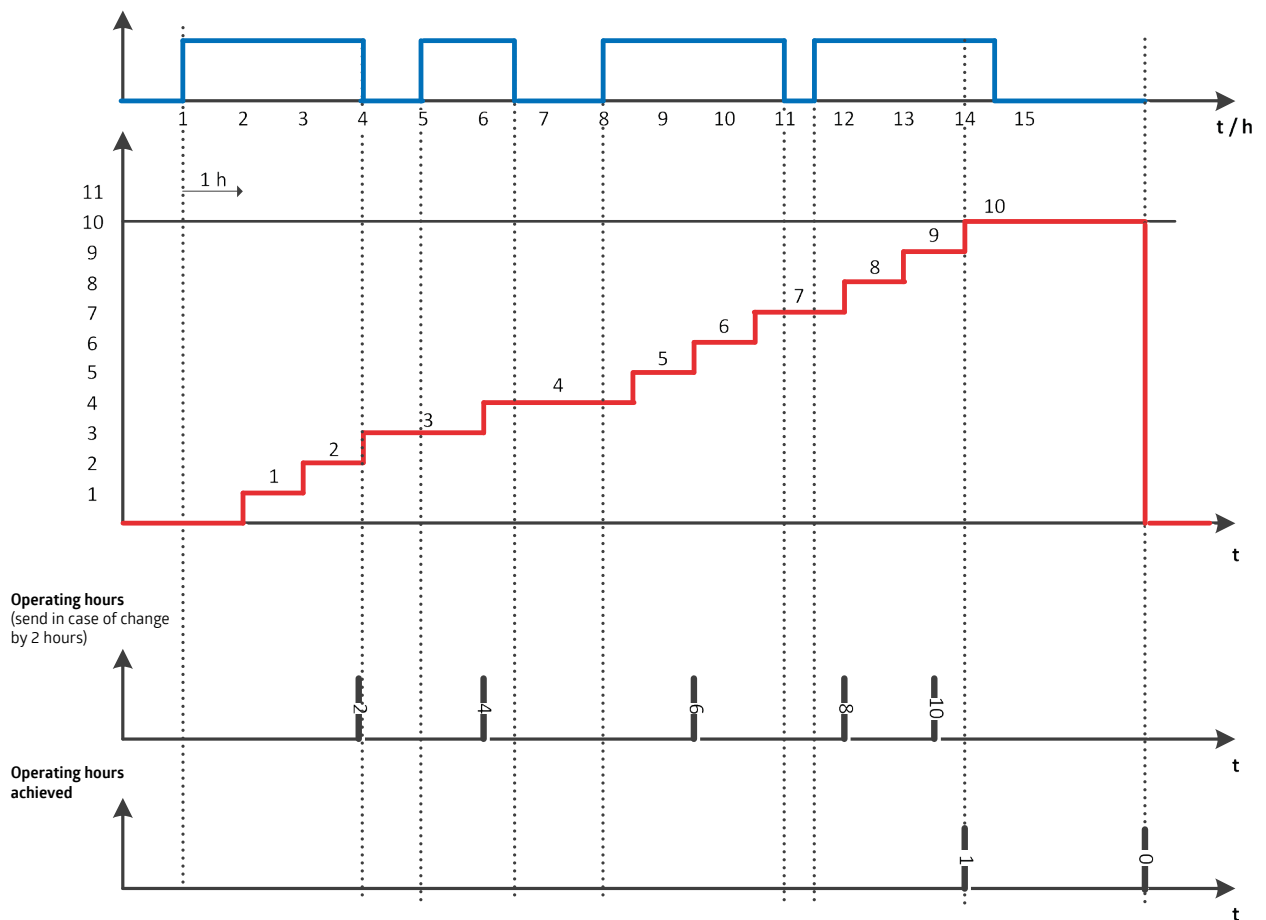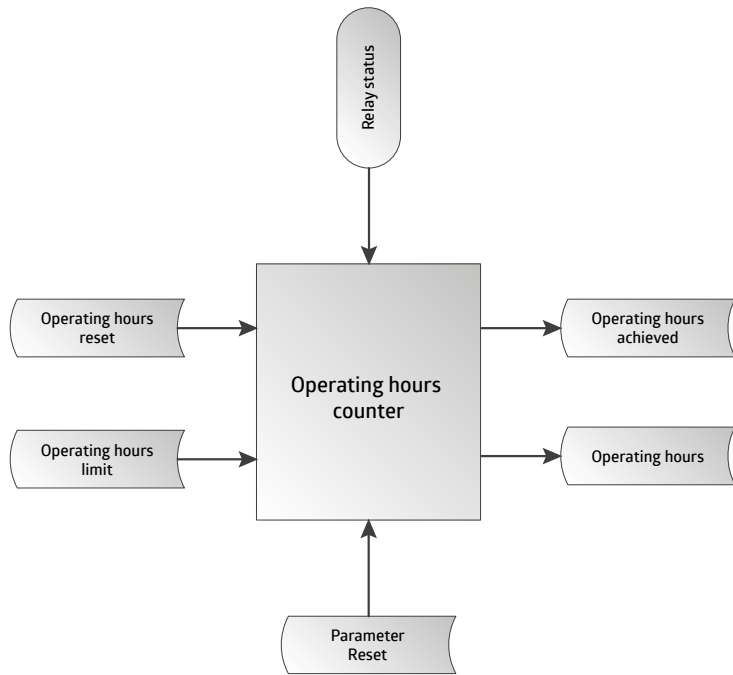

Channel: Operating hours counter (visible if operating hours are activated)	
Relay state at which is to be counted (visible if "Detection via relay status")	closed open closed or open
Operating hours limit value in hours	1 – 65535 [8760]
Overwrite operating hours limit value	deactivated via communication object
Changed limit value by ETS download or object reset (visible if can be overwritten by object) (Note: Reset function/object must be activated in the basic functions).	overwritable not overwritable
Current operating meter reading by ETS download or object reset resettable (Note: Reset function/object must be activated in the basic functions).	deactivated activated
Send operating hours	deactivated in case of change
Change in hours	0 – 24 [1]
Message operating hours send reached	deactivated in case of change in case of change and cyclically
Cycle time hh:mm (visible if cyclical)	0 – 24 [24]
Cycle time hh:mm (visible if cyclical)	0 – 59 [00]
Value of the message object (visible if message object is sent)	„0“ = not achieved / „1“ = achieved „1“ = not achieved / „0“ = achieved

No.	Name	Function	C	R	W	T	M
11	K: Input (DPT 13.100)	Operating hours limit	X	-	X	-	-
12	K: Input (DPT 1.001)	Reset operating hours	X	-	X	-	-
13	K: Output (DPT 1.001)	Operating hours achieved	X	-	-	X	-
14	K: Output (13,100)	Operating hours	X	-	-	X	-

4.3 Switching cycle counter

The function of a switching cycle counter corresponds to the function of the operating hours counter. Instead of the operating hours, the switching cycles of the relay are counted here. You can select whether only switch-on operations, only switch-off operations or both are to be counted.

The switching cycles are counted and compared with a switching cycle counter limit value. If this limit value is reached, a message (switching cycles reached) is sent. This can be a „1“ or „0“ telegram.


The limit value can be defined by a parameter or changed during operation by a 4-byte object (switching cycle limit). If a new value is sent via the object, the current counter reading is reset.

The current switching cycle counter status (switching cycles object) can be sent cyclically. The message object (switching cycles reached) can also be sent cyclically. In addition, only a change can be sent here (minimization of the bus load).

When the application is loaded for the first time, the switching cycle limit value stored in the parameters is saved in the actuator and the switching cycle counter is set to zero.

During operation, the switching cycle counter changes and the limit value can be changed using a 4-byte telegram. When the application is reloaded, you can now decide whether the current values should be overwritten by the ETS or not.

In the event of a bus voltage failure, the current value of the switching cycle counter is not lost. It is restored when bus voltage is restored.

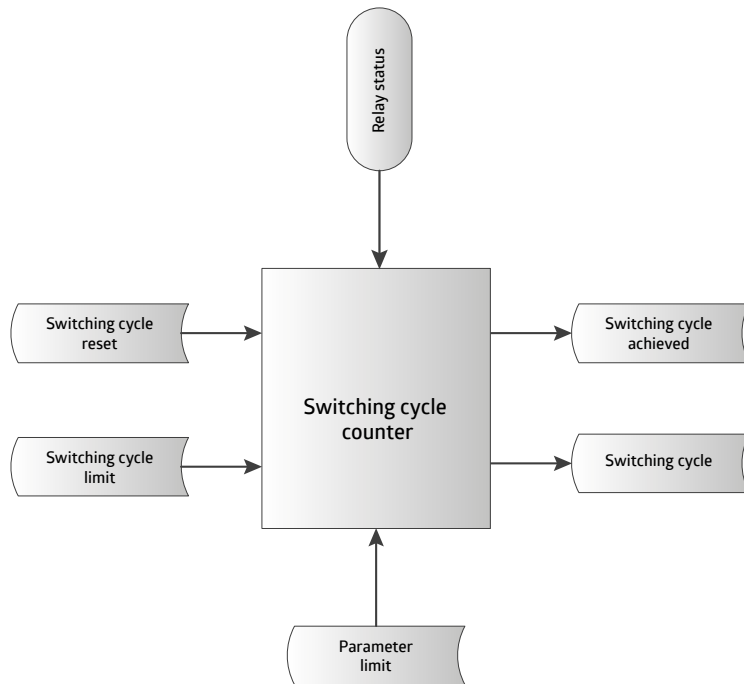

Channel: Switching cycle counter (visible if the switching cycle counter is activated)	
The following are counted	Switch-off processes Switch-on processes Switching on and off
Switching cycle counter limit value	0 - 100000 [10000]
Switching cycle counter limit value	determined by parameters overwritable by object
Changed switching cycle counter limit value by ETS download or object reset (visible if can be overwritten by object) (Note: Reset function/object must be activated in the basic functions).	overwritable not overwritable
Current switching cycle counter reading by ETS download or object can be reset (Note: Reset function/object must be activated in the basic functions).	deactivated activated
Send meter reading	deactivated in case of change cyclic in case of change and cyclically
Cycle time in hours (visible if cyclical)	0 - 24 [24]
Change in steps (visible if changed)	10 - 10000 [1000]
Send message if switching cycles reached	deactivated in case of change in case of change and cyclically
Cycle time hh:mm (visible if cyclical)	0 - 24 [24]
Cycle time hh:mm (visible if cyclical)	0 - 59 [0]
Value of the message object (visible if message object is sent)	„0“ = not achieved / „1“ = achieved „1“ = not achieved / „0“ = achieved



LUXOMAT[®] net Switching actuator KNX RF Secure

No.	Name	Function	C	R	W	T	M
15	K: Input (DPT12.001)	Switching cycle limit	X	-	X	-	-
16	K: Input (DPT 1.001)	Reset switching cycles	X	-	X	-	-
17	K: Output (DPT 1.001)	Switching cycles achieved	X	-	-	X	-
18	K: Output (DPT 12.001)	Switching cycles	X	-	-	X	-

5 Input events / filters

A basic function is assigned to the channel. There are three basic functions: Switching operation, automatic staircase control and flashing function. The basic functions are mutually exclusive, i.e. exactly one of these functions can be assigned to the channel.


The channel's input objects are the switching object, the central object and the scene object. Depending on the parameterisation, the switching object can trigger different reactions and is used, for example, to control an automatic staircase controller or to activate the flashing function. An input event is assigned to a basic function via an input filter. Scene objects are used to call up saved scenes. For this purpose, a scene number (1 - 64) is sent via the KNX bus. Each channel can be assigned 8 scene numbers. An input event can now be assigned to each scene number, which then acts on the basic function. With scenes, the event is defined in the function, i.e. it is not filtered.

5.1 Input objects: Switching and central object

A switching object is assigned to the channel. An input event causes a telegram, the value of which can be parameterised. The input event causes the staircase controller to switch or start, for example.

The central object is a 1-bit object. This object can affect all channels. For each channel, you can specify whether the channel should evaluate the central object or not. A telegram to this object is equivalent to telegrams to the switching object. However, the central function has its own input filters.

The input objects all have the same priority, i.e. the last telegram always prevails.

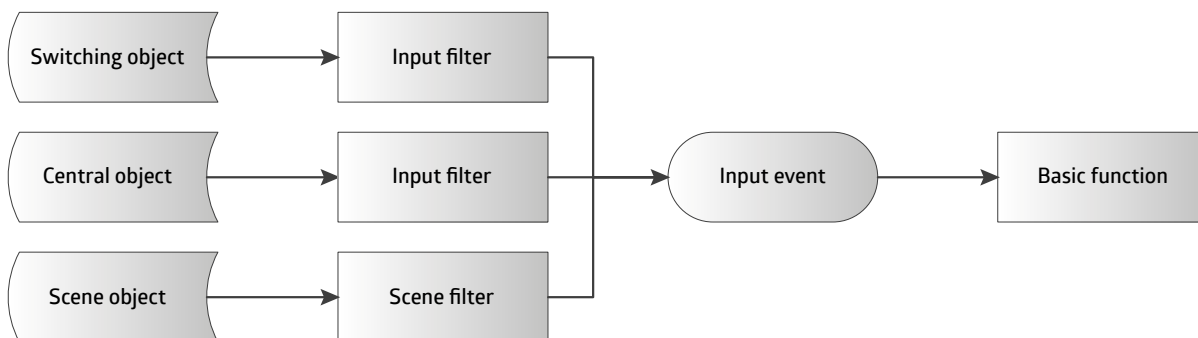

5.2 Scene function

8 independent scenes can be saved for the channel. Once the scene function has been activated for a channel, a scene object appears. If a scene number (1 to 64) is written to this object, the corresponding scene is called up.

The current channel/relay status can be saved as a new scene. This also applies if the relay status is created by a high-priority link. However, the high-priority logic operation is not stored in the scene, only the relay status.

The input result affects the downstream basic function, i.e. a scene can also mean the start of an automatic staircase controller.

Programming the device again with the ETS generally overwrites all parameter values. If scenes have been taught via the bus, overwriting can be suppressed.

A common reset object can be used to reset changed scenes to their originally parameterised values. A reset is only triggered by a „1“ telegram.

Channel: Scene function (visible if the scene function is activated)	
Scene A	deactivated
	with scene memory function
	without scene memory function
Scene number for scene A (visible if scene A is activated)	1 – 64 [1]
Value Input event for scene A (visible if scene A is activated)	„0“
	„1“
...	...
Scene H	deactivated
	with scene memory function
	without scene memory function
Scene number for scene H (visible if scene H is activated)	1 – 64 [8]
Value Input event for scene H (visible if scene H is activated)	„0“
	„1“
Saved scenes by ETS download or object reset (Note: Reset function/object must be activated in the basic functions).	overwritable
	not overwritable
The end of the learning process is indicated by a switching cycle is signaled	activated
	deactivated

No.	Name	Function	C	R	W	T	M
2	K: Input (DPT 18.001)	Scene	X	-	X	-	-

NOTES




- Scene objects have the same priority as the input objects, i.e. the last telegram always prevails.
- The defined input result is not sent directly to the relay. Only the basic function and the result from the logic block produce the switching status.
- If the scenes are to be reset using the reset object, this function/object must be enabled in the basic functions. Resetting resets all selected parameters (i.e. not just the scenes).

6 Basic functions

The basic functions of the channel are defined in the basic functions. The switching function, the automatic staircase controller and the flashing function are controlled by the switching or scene object. It can be defined whether this should take place with a time delay. A time delay is not possible for the flashing function.

Downstream logic functions prevail over the basic function.

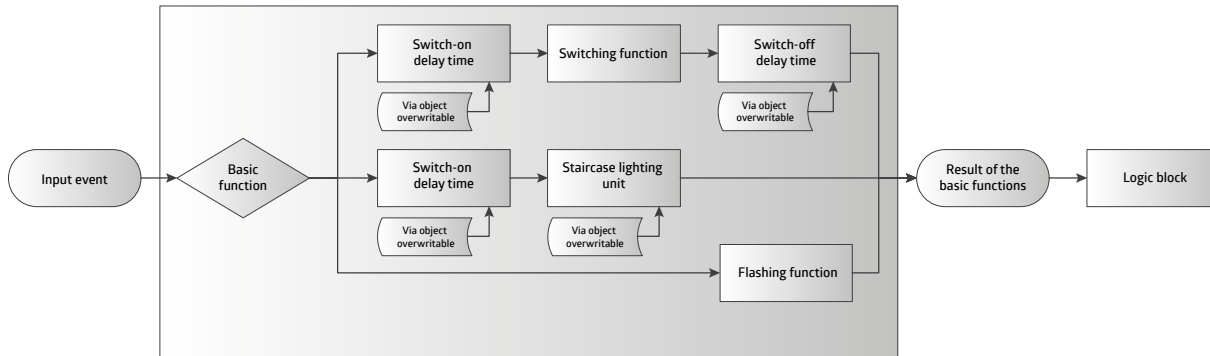

K: Basic functions	
Basic function	Switching
	Staircase timer
	Flashing function
Switch-on delay (switching, scenes, central function) (visible when switching and Staircase timer)	deactivated
	activated
Switch-off delay (switching, scenes, central function) (visible when switching)	deactivated
	activated

6.1 Switch-on and switch-off delay

Both a switch-on delay and a switch-off delay can be parameterised for the basic switching function. A switch-on delay can be parameterised for the basic function Staircase automation. The time delays mean that the basic functions are carried out with a delay, i.e., for example, that the channel only switches on or starts the staircase timer after the switch-on delay has elapsed.







NOTES	
	<ul style="list-style-type: none"> ▪ If the hours, minutes and seconds parameters for the delays are all set to „0“, no delay time is started and the channel switches immediately. ▪ The common object „Parameter Reset“ deletes running times.

It can be defined individually for each object (switching, central and scene object) whether a delay should be started. For example, the switching and central object can have a delayed effect, but the scenes can be switched directly.

The delay times can be retriggerable, i.e. the time is restarted after the same telegram value is received.

The delay time can be changed via the KNX bus during operation between 0 and 65535 seconds (corresponds to max. 18.2 h). To do this, a telegram with a 2-byte value (0 to 65535) must be sent. As soon as such a value has been received, the duration specified by the parameters loses its validity (even after a bus reset).

Reprogramming the device with the ETS generally overwrites all parameter values. If a delay time is changed/set via the bus, overwriting can be suppressed. A common reset object (parameter reset) can be used to reset changed delay times to their originally parameterized values.

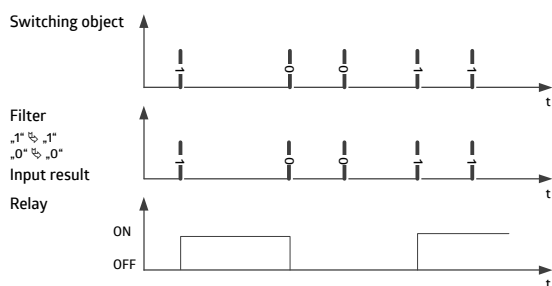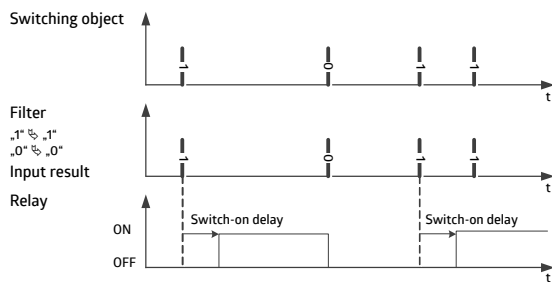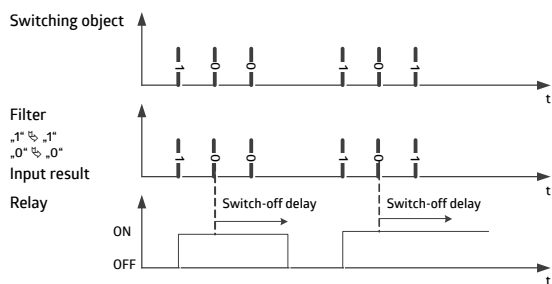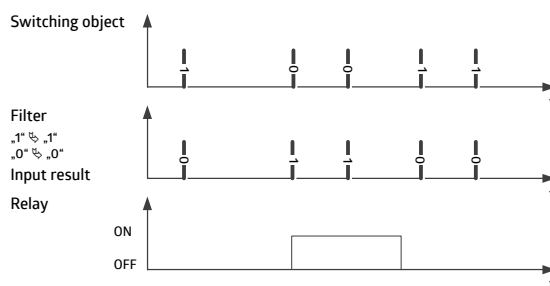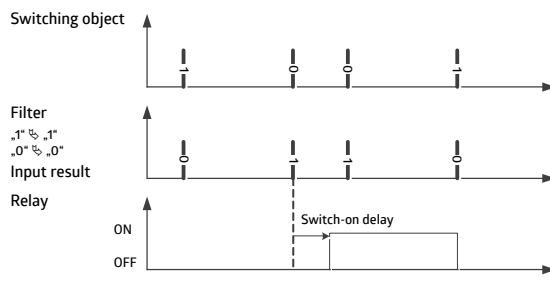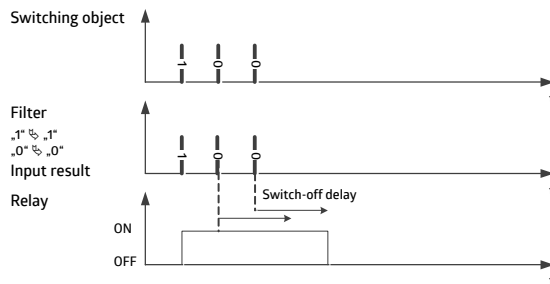

Switching function

Switch-on delay

Non-retriggerable switch-off delay

Switching function with filter

Switch-on delay with filter

Retriggerable switch-off delay

Channel: Switch-on delay (visible if switch-on delay is activated)	
Start/retriggering of the switch-on delay by	Input event "1"
Delay time hh:mm:ss	0-24 [00]
Delay time hh:mm:ss	0-59 [01]
Delay time hh:mm:ss	0-59 [00]
Switch-on delay	not retriggerable
	retriggerable
Switching object acts	undelayed
	delayed
Central object acts	undelayed
	delayed
Scene object works	undelayed
	delayed
Overwrite delay time	deactivated
	via communication object
Delay time due to ETS download or object reset (visible if "via communication object" is activated)	overwritable
(Note: Reset function/object must be activated in the basic functions).	not overwritable

Channel: Switch-off delay <small>(visible if switch-off delay is activated)</small>	
Start/retriggering of the switch-off delay by	Input event "0"
Delay time hh:mm:ss	0-24 [0]
Delay time hh:mm:ss	0-59 [1]
Delay time hh:mm:ss	0-59 [0]
Switch-off delay	not retriggerable retriggerable
Switching object acts	undelayed delayed
Central object acts	undelayed delayed
Scene object works	undelayed delayed
Overwrite delay time	deactivated via communication object
Delay time due to ETS download or object reset <small>(visible if "via communication object" is activated)</small> <small>(Note: Reset function/object must be activated in the basic functions).</small>	overwritable not overwritable

No.	Name	Function	C	R	W	T	M
1	K: Input (DPT 1.001)	Switching	X	-	X	-	-
8	K: Input (DPT 7.005)	Switch-on delay time	X	-	X	-	-
9	K: Input (DPT 7.005)	Switch-off delay time	X	-	X	-	-


NOTE

 If the delay times are to be reset using the reset object, this function/object must be enabled in the basic functions. Resetting resets all selected parameters (i.e. not just the delay times).


6.2 Staircase timer

If no delay, logic operation or logic functions are switched on, the channel is switched on by an input event in the automatic staircase function. After a freely selectable time (run-on time) has elapsed, the channel switches off automatically. The input event results from the input filter and the input objects.


NOTE

 If the hours, minutes and seconds parameters for the delays are all set to "0", the staircase timer does not start.

- The common object "Parameter Reset" deletes running times.

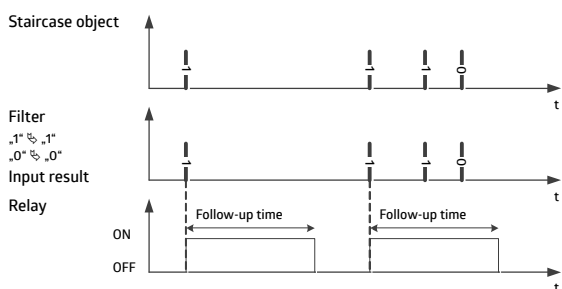


Non-retriggerable automatic staircase controller

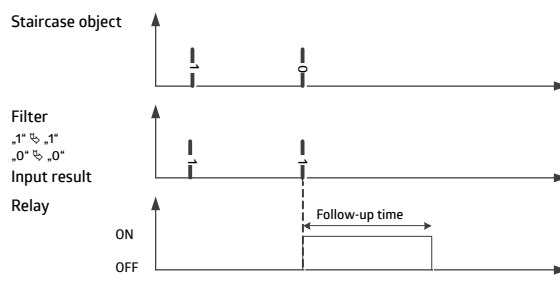


Staircase controller with filter function

The basic „Staircase timer“ function can be changed by setting parameters. For example, you can define whether the time should be started with an ON or OFF telegram (switching, scene, central object). The follow-up time can, for example, be retriggerable or non-retriggerable or can be extended in addition.

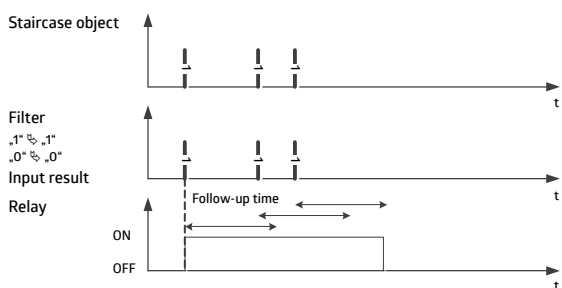


Retriggerable automatic staircase controller

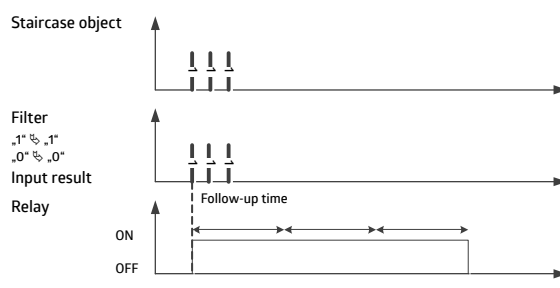


Staircase automation adding

The switch-on delay can be used to start the run-on time with a delay. The switch-off delay is not available for the automatic staircase function.

The run-on time can be switched off manually before it expires by means of an OFF telegram (manual OFF).

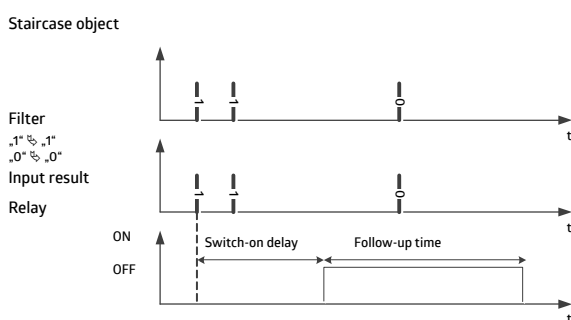

Automatic staircase controller without manual off function and with non-retriggerable switch-on delay

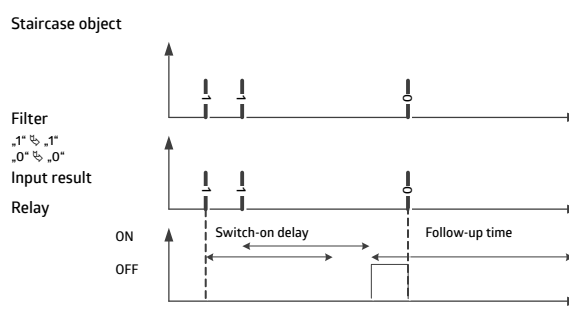


Automatic staircase controller with manual off function with retriggerable switch-on delay


A pre-warning time can be added to the run-on time. After the run-on time has elapsed, the light switches off and on several times in quick succession (pre-warning). The light then remains on for the duration of the pre-warning time before it switches off. During this time, the run-on time can be restarted.

The pre-warning time can be defined between 1 and 255 s. The light can be switched off/on up to three times (pre-warning).

A „manual off“ also starts a pre-warning.

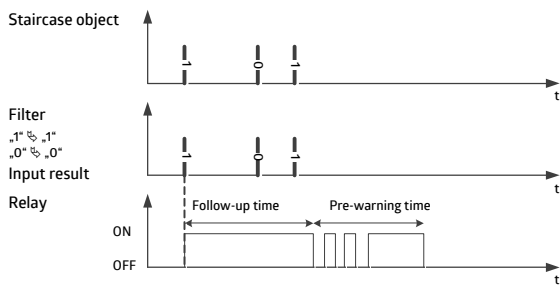

Non-retriggerable automatic staircase controller without manual off with two warnings

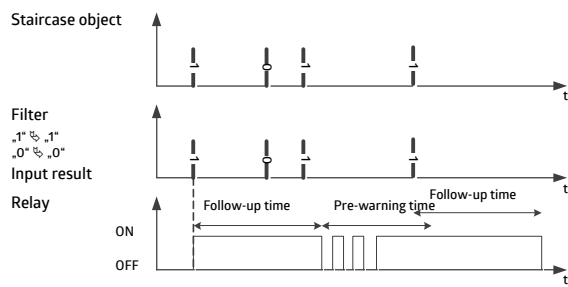

Restart of the run-on time during the pre-warning

The run-on time can be changed via the KNX bus during operation between 0 and 65535 seconds (corresponds to max. 18.2 h). To do this, a telegram with a 2-byte value (0 to 65535) must be sent. As soon as such a value has been received, the duration specified by the parameters loses its validity (even after a bus reset).

Reprogramming the device with the ETS generally overwrites all parameter values. If a run-on time is changed/set via the bus, overwriting can be suppressed. A changed run-on time can be reset to its originally parameterized value using a common reset object.

Channel: Staircase timer (visible if the Staircase timer is activated)	
Start/retriggering of the Staircase timers through	Input event „1“
Manual Off the Staircase timers through	Input event „0“
Follow-up time hh:mm:ss	0-24 [00]
Follow-up time hh:mm:ss	0-59 [05]
Follow-up time hh:mm:ss	0-59 [00]
Staircase timer	without manual off with manual off
Follow-up time	not retriggerable retriggerable retriggerable, adding
Maximum additions (visible with "retriggerable, adding")	2 - 5 [3]
Number of warnings	0 - 3 [3]
Overwrite follow-up time	deactivated via communication object
Follow-up time due to ETS download or object reset (visible if "via communication object") (Note: Reset function/object must be activated in the basic functions).	overwritable not overwritable

No.	Name	Function	C	R	W	T	M
9	K: Input (DPT 7.005)	Follow-up time	X	-	X	-	-

NOTE



If the run-on time is to be reset using the reset object, this function/object must be enabled in the basic functions. The reset resets all selected parameters (i.e. not just the run-on time).


6.3 Flashing function

With the flashing function, the channel switches on and off periodically, for example to make an LED flash in a janitor's office to indicate the opening of an assigned door. If the input event is „1“, the view function is started, and if it is „0“, it is stopped (switching, central, scene object).


The flashing function cannot be switched on or off with a delay.

The feedback object indicates whether the flashing function is switched on or off and not whether the relay is closed or open. To keep the bus load low, the current relay value is not sent to the bus in this case.

The switch-on and switch-off times can be set from 1 to 60 s. In order to protect the relay with larger loads, no times shorter than 1 s can be parameterized. The smallest frequency is therefore 0.5 Hz (1 s switched on and 1 s switched off).

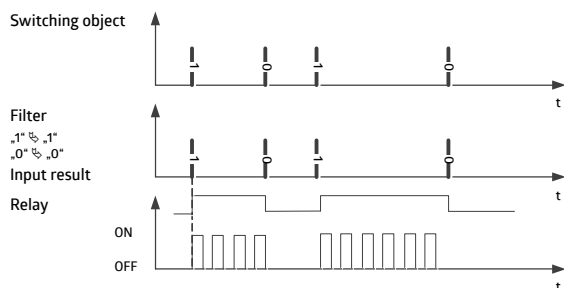

Symmetrical flashing function

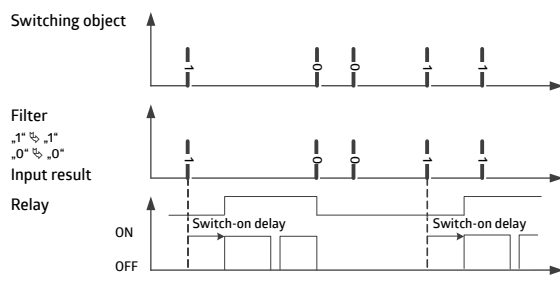


Asymmetrical flashing function

Channel: Flashing function (visible if the flashing function is activated)	
Flashing with	Input event „1“
Switch off at	Input event „0“
Switch-on time in seconds	1-60 [1]
Switch-off time in seconds	1-60 [1]

7 Logic functions

The actuator has four logic functions: the logic operation, the disabling function, the positive drive and the safety function. Their sequence determines their priority, i.e. the safety function has the highest priority as it is at the end of the chain. If the safety function is activated by the safety object, the results from the basic function, logic operation, disabling function and priority control blocks are not sent to the switching output.

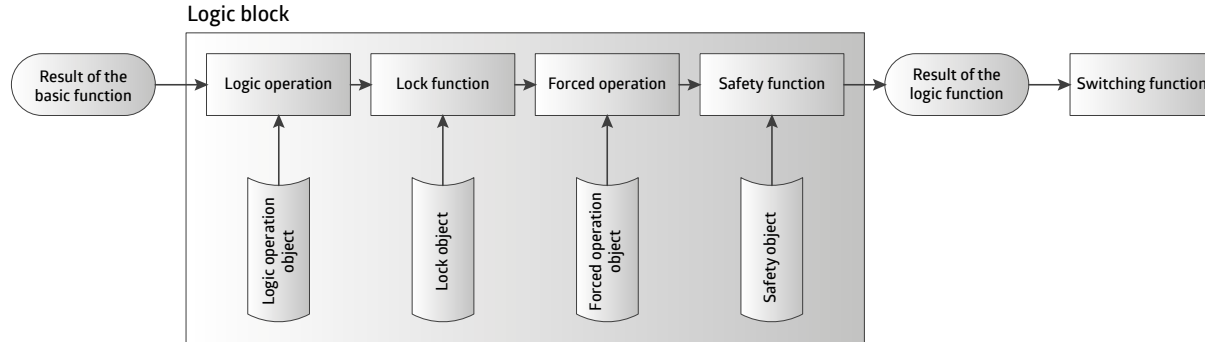

Repercussions of logic functions on the basic functions:

The disabling function, forced operation and safety functions have an effect on the basic functions. As soon as one of these logic functions is activated, running times of the channel are ended immediately. The result of the basic function is what would have occurred if the timers had run normally (setting: follows subordinate status).

Examples:


1. The disabling function is activated during a switch-on delay. The basic function provides the result „1“ in the background and the delay time is ended immediately.
2. If forced operation is activated during a switch-off delay, the time is also ended, but the result of the basic function is „0“.
3. The result is „0“ for running run-on times, as a staircase timer switches off automatically. The result is also „0“ if a switch-on delay has been activated, regardless of whether the logic function was activated during the switch-on delay or during the run-on time.

Only the link functions keep running times running in the background. The result of the basic function therefore depends on the time at which the link is deactivated again.

Inputs of the logic functions / comparators:

With the exception of forced operation, the logic functions are controlled by 1-bit objects / values, for example. For example, a channel can be blocked by a blocking object. In the logic operation, the logic object is linked logically / Boolean, e.g. with an AND operation, to the result of the basic function.

As an alternative to these 1-bit objects, the functions (with the exception of forced operation) can also be carried out using a comparator. Instead of a 1-bit blocking object, objects with a different format, e.g. percentage, 2-byte counter, floating point, etc. can be used. Two threshold values can be freely selected in the comparator. The values of the objects are compared with these two threshold values. The logic function is activated or deactivated if they are exceeded or not reached. A comparator with integrated hysteresis can be implemented by selecting the appropriate threshold values.

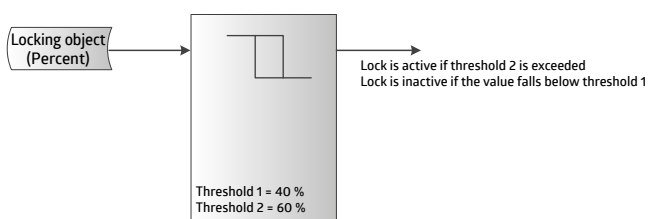


Channel: Logic functions (visible if channel 1 is activated)	
Logic operation 1	deactivated
	activated
Logic operation 2	deactivated
	activated
Lock	deactivated
	activated
Forced operation	deactivated
	activated
Safety	deactivated
	activated

7.1 Links

Logic functions are Boolean algebra. The AND, OR and XOR functions are available.


Two logic functions/gates connected in series are available. Logic 1 has logic 1 and the result of the basic function as input. Logic operation 2 has logic operation 2 and the result of logic operation 1 as input. The result of logic operation 2 is passed on to the next logic function.

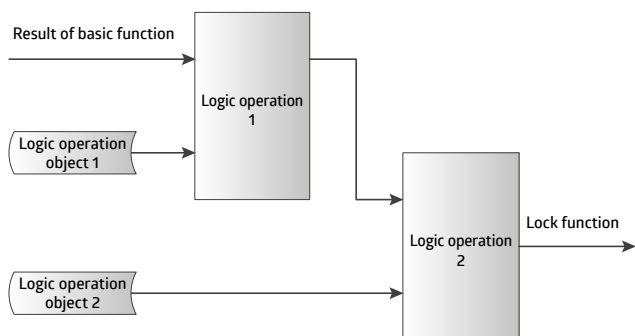

The parameters can be used to specify whether the logic objects should have an inverted effect on the logic function, and the value of the logic operation after bus voltage recovery can be specified.

Running times, e.g. delay times and run-on times, are not stopped or terminated when a logic operation is activated. If, for example, a logic operation is activated during a run-on time of an automatic staircase controller, the behavior of the output when the logic operation is deactivated depends on whether the run-on time has expired during the logic operation or not.

The result of a comparator can also be used instead of a 1-bit link object.

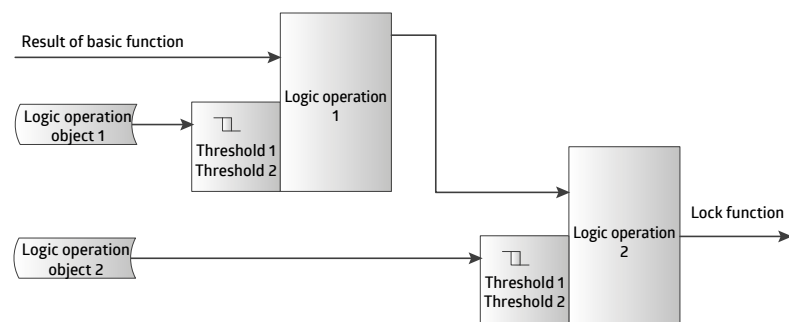

7.1.1 Logic functions settings

The logic gate to be used to link the inputs with the output can be selected here. The result of the basic function is linked to logic object 1. If logic operation 2 is used, the result of logic operation 1 is linked to logic operation object 2. The following settings and parameters are identical for logic operation 2.

Channel: Logic functions > Logic operation 1	
Logic gate	OR
	AND
	XOR

Bei den Objekttypen stehen unterschiedliche Datenpunkttypen zur Auswahl. Jeder Eingang kann je nach Anwendung mit dem entsprechenden Datenpunkttyp versehen werden.

Channel: Logic functions > Logic operation 1	
Object type	1Bit (DPT 1.001)
	1 byte Percent DPT 5.001)
	1 byte counter DPT 5.010)
	1 byte counter with sign DPT 6.010)
	2 byte float (DPT 9.x)
	2 byte counter (DPT 7.x)
	2-byte counter with sign (DPT 8.x)
	4 byte float (DPT 14.x)
	4 byte counter (DPT 12.x)
	4-byte counter with sign (DPT 13.x)

The comparators can be used to define the conditions for the individual inputs. The values for the logical state „1“ or „0“ can be set here depending on the selected data point type.

Channel: Logic functions > Logic operation 1	
Logic input is "0" for	less than or equal to
	greater than or equal to

Channel: Logic functions > Logic operation 1	
Logic input is "1" for	less than or equal to
	greater than or equal to

Channel: Logic functions > Logic operation 1		
Values at "0"	1Bit (DPT 1.001)	0 ... 1 (0)
	1 byte Percent DPT 5.001)	0 ... 100 (40)
	1 byte counter DPT 5.010)	0 ... 255 (0)
	1 byte counter with sign DPT 6.010)	-128 ... 127 (-50)
	2 byte float (DPT 9.x)	-671088,64 ... 670433,28 (400)
	2 byte counter (DPT 7.x)	0 ... 65535 (400)
	2-byte counter with sign (DPT 8.x)	-32768 ... 32767 (400)
	4 byte float (DPT 14.x)	-9,2233720E+18 ... 9,2233720E+18 (400)
	4 byte counter (DPT 12.x)	0 ... 4294967295 (400)
	4-byte counter with sign (DPT 13.x) (without decimal place)	-2147483648 ... 2147483647 (400)

Channel: Logic functions > Logic operation 1		
Values for "1"	1Bit (DPT 1.001)	0 ... 1 (1)
	1 byte Percent (DPT 5.001)	0 ... 100 (60)
	1 byte counter (DPT 5.010)	0 ... 255 (50)
	1 byte counter with sign (DPT 6.010)	-128 ... 127 (50)
	2 byte float (DPT 9.x)	-671088,64 ... 670433,28 (500)
	2 byte counter (DPT 7.x)	0 ... 65535 (500)
	2-byte counter with sign (DPT 8.x)	-32768 ... 32767 (500)
	4 byte float (DPT 14.x)	-9,2233720E+18 ... 9,2233720E+18 (500)
	4 byte counter (DPT 12.x)	0 ... 4294967295 (500)
	4-byte counter with sign (DPT 13.x) (without decimal place)	-2147483648 ... 2147483647 (500)

The status of the logic input (1 or 0) after bus voltage recovery can also be defined.


Channel: Logic functions > Logic operation 1	
Logic input after bus voltage recovery	1
	0

No.	Name	Function	C	R	W	T	M
3	K: Input (DPT1.001)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT5.001)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT5.010)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT6.010)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT9.x)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT7.x)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT8.x)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT14.x)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT12.x)	Logic operation 1	X	-	X	-	-
3	K: Input (DPT13.x)	Logic operation 1	X	-	X	-	-
4	K: Input (DPT1.001)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT5.001)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT5.010)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT6.010)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT9.x)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT7.x)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT8.x)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT14.x)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT12.x)	Logic operation 2	X	-	X	-	-
4	K: Input (DPT13.x)	Logic operation 2	X	-	X	-	-


7.2 Locking function

The disabling function is controlled by the disabling object and the subordinate functions. The logic operation function is subordinate, and if this is not activated, the result of the basic function (switching, staircase, flashing). The disabling function is activated by the disabling object. The object value at which this should occur can be selected.

The result of the disabling function is either forwarded to the higher-level logic functions (priority control, safety), if these have been activated, or to the switching output. The next higher-level logic function is forced operation.

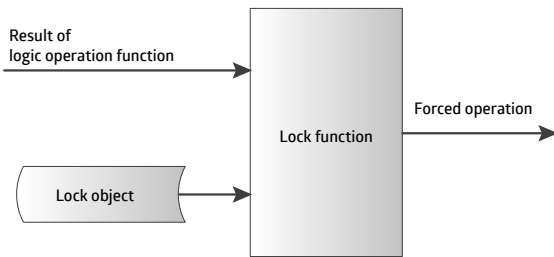

The result of a comparator can also be used instead of the 1-bit blocking object.

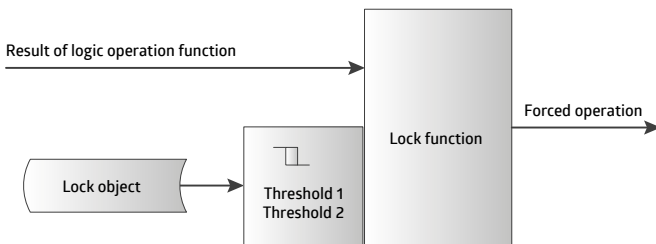

7.2.1 Locking function settings

The settings for the locking function can be selected here.

Different data point types are available for the object types. Each input can be assigned the corresponding data point type depending on the application.

Channel: Locking function	
Object type	1Bit (DPT 1.001)
	1 byte Percent (DPT 5.001)
	1 byte counter (DPT 5.010)
	1 byte counter with sign (DPT 6.010)
	2 byte float (DPT 9.x)
	2 byte counter (DPT 7.x)
	2-byte counter with sign (DPT 8.x)
	4 byte float (DPT 14.x)
	4 byte counter (DPT 12.x)
4-byte counter with sign (DPT 13.x)	

The comparators can be used to define the conditions for the individual inputs. The values for the logical state „1“ or „0“ can be set here depending on the selected data point type.

Channel: Locking function	
Locking function is deactivated for	less than or equal to
	greater than or equal to

Channel: Locking function	
Lock function is active for	less than or equal to
	greater than or equal to

Channel: Locking function	
Values for deactivated	
	1Bit (DPT 1.001) 0 ... 1 (0)
	1 byte Percent DPT 5.001) 0 ... 100 (40)
	1 byte counter DPT 5.010) 0 ... 255 (0)
	1 byte counter with sign DPT 6.010) -128 ... 127 (-50)
	2 byte float (DPT 9.x) -671088,64 ... 670433,28 (400)
	2 byte counter (DPT 7.x) 0 ... 65535 (400)
	2-byte counter with sign (DPT 8.x) -32768 ... 32767 (400)
	4 byte float (DPT 14.x) -9,2233720E+18 ... 9,2233720E+18 (400)
	4 byte counter (DPT 12.x) 0 ... 4294967295 (400)
	4-byte counter with sign (DPT 13.x) (without decimal place) -2147483648 ... 2147483647 (400)

Channel: Locking function	
Values for active	
	1Bit (DPT 1.001) 0 ... 1 (1)
	1 byte Percent DPT 5.001) 0 ... 100 (60)
	1 byte counter DPT 5.010) 0 ... 255 (50)
	1 byte counter with sign DPT 6.010) -128 ... 127 (50)
	2 byte float (DPT 9.x) -671088,64 ... 670433,28 (500)
	2 byte counter (DPT 7.x) 0 ... 65535 (500)
	2-byte counter with sign (DPT 8.x) -32768 ... 32767 (500)
	4 byte float (DPT 14.x) -9,2233720E+18 ... 9,2233720E+18 (500)
	4 byte counter (DPT 12.x) 0 ... 4294967295 (500)
	4-byte counter with sign (DPT 13.x) (without decimal place) -2147483648 ... 2147483647 (500)

The result of the active locking function can be selected. „No reaction“ at the start of the lock means that the current result, which was available when the lock was activated, is frozen during the lock.

Channel: Locking function	
Action at the start of the lockdown	"0"
	"1"
	no reaction

The result can also be defined when the lock is removed. This value is passed on to the higher-level function when it is removed. If the setting „no reaction“ is selected, the current result of the lock remains unchanged. Only an input event updates the result. With „follows subordinate status“, the disabling function determines a new result based on the subordinate functions.

If the result of the blocking function is „1“ when the block is removed, the run-on time is started for an automatic staircase controller. For staircase controllers with switch-on delay, the switch-on delay is ignored.


Channel: Locking function	
Value of the basic function on removal the lock (no priority active)	"0"
	"1"
	no reaction
	follows subordinate status

B.E.G. LUXOMAT[®] net Switching actuator KNX RF Secure

The locking function can be activated and limited in time, i.e. an activated lock is automatically deactivated again after a selectable time.

Channel: Locking function > Locking time (visible if "Time-limited locking function" is activated)	
Locking time hh:mm:ss	0-24 [00]
Locking time hh:mm:ss	0-59 [10]
Locking time hh:mm:ss	0-59 [00]

You can specify whether the disable function should be activated or remain **deactivated** after bus voltage recovery.


NOTE	
	<ul style="list-style-type: none"> Activation and deactivation are instantaneous, i.e. parameterized delay times are ignored. If the disable function is activated, current delay times and run-on times are deleted from the basic functions.

No.	Name	Function	C	R	W	T	M
5	K: Input (DPT1.001)	Lock	X	-	X	-	-
5	K: Input (DPT5.001)	Lock	X	-	X	-	-
5	K: Input (DPT5.010)	Lock	X	-	X	-	-
5	K: Input (DPT6.010)	Lock	X	-	X	-	-
5	K: Input (DPT9.x)	Lock	X	-	X	-	-
5	K: Input (DPT7.x)	Lock	X	-	X	-	-
5	K: Input (DPT8.x)	Lock	X	-	X	-	-
5	K: Input (DPT14.x)	Lock	X	-	X	-	-
5	K: Input (DPT12.x)	Lock	X	-	X	-	-
5	K: Input (DPT13.x)	Lock	X	-	X	-	-

7.3 Forced operation

Forced operation is controlled by the forced operation object and the subordinate functions. Subordinate functions are the disabling and logic operation functions and, if these are not activated, the result of the basic function (switching, staircase, flashing). Forced operation is activated by the forced operation object.

The result of the forced operation is either forwarded to the higher-level logic function (safety), if this is activated, or to the switching output.

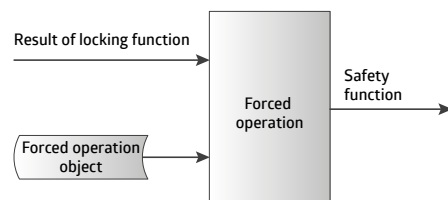

The result can also be defined if the forced operation is removed. Either a specific value „0“ or „1“ can be selected. This value is passed on to the higher-level safety function when it is removed. With the „no reaction“ setting, the current result of the forced operation remains unchanged. Only an input event updates the result. With „follows subordinate status“, the priority control determines a new result based on the subordinate functions.

If the result is „1“ when the priority control is removed, the run-on time is started for an automatic staircase controller. For staircase controllers with switch-on delay, the switch-on delay is ignored.

You can specify which value the priority control object should have after bus voltage recovery.

NOTES



- Activation and deactivation are instantaneous, i.e. parameterized delay times are ignored.
- If forced operation is activated, current delay times and overrun times are deleted from the basic functions.

Channel: Forced operation (visible if Forced operation is activated)	
The result of the locking function is displayed depending passed on by the Forced operation.	
Value of the basic function on removal from forced operation (no priority active)	„0“
	„1“
	no reaction follows subordinate status
On bus voltage recovery	positively driven OFF
	positively driven ON
	not compulsorily guided


No.	Name	Function	C	R	W	T	M
6	K: Input (DPT 2.001)	Forced operation	X	-	X	-	-

7.4 Safety function


The safety function has the highest priority among the higher-level functions. The safety function is an extended disabling function. In addition, the safety object is monitored here, i.e. telegrams must be received cyclically on this object. Otherwise, the channel switches to the higher-level status defined in the parameters.

The safety function is controlled by the safety object and the subordinate functions. Subordinate functions are the logic operation, disabling and forced operation functions and, if these are not activated, the result of the basic function (switching, staircase, flashing). The safety function is activated by the safety object. The object value at which this should occur can be selected. The safety function is also activated if the object value is missing in a periodic time frame.

The result of the safety function is passed on to the switching output.

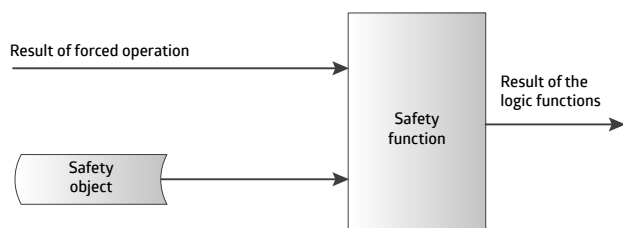

The result of a comparator can also be used instead of the 1-bit security object.

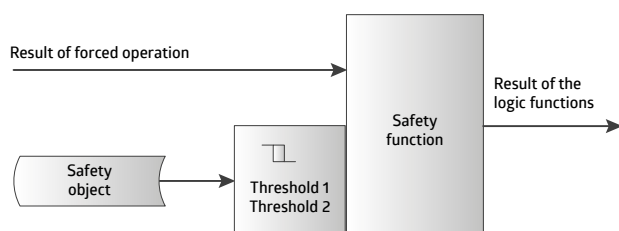

7.4.1 Safety function settings

The settings for the security function can be selected here.

Different data point types are available for the object types. Each input can be assigned the corresponding data point type depending on the application.

Channel: Safety function	
Object type	1Bit (DPT 1.001)
	1 byte Percent DPT 5.001)
	1 byte counter DPT 5.010)
	1 byte counter with sign DPT 6.010)
	2 byte float (DPT 9.x)
	2 byte counter (DPT 7.x)
	2-byte counter with sign (DPT 8.x)
	4 byte float (DPT 14.x)
	4 byte counter (DPT 12.x)
	4-byte counter with sign (DPT 13.x)

The comparators can be used to define the conditions for the individual inputs. The values for the logical state „1“ or „0“ can be set here depending on the selected data point type.

Channel: Safety function	
Safety function is deactivated for	less than or equal to
	greater than or equal to

Channel: Safety function	
Safety function is active for	less than or equal to
	greater than or equal to

Channel: Safety function		
Values for deactivated	1Bit (DPT 1.001)	0 ... 1 (0)
	1 byte Percent DPT 5.001)	0 ... 100 (40)
	1 byte counter DPT 5.010)	0 ... 255 (0)
	1 byte counter with sign DPT 6.010)	-128 ... 127 (-50)
	2 byte float (DPT 9.x)	-671088,64 ... 670433,28 (400)
	2 byte counter (DPT 7.x)	0 ... 65535 (400)
	2-byte counter with sign (DPT 8.x)	-32768 ... 32767 (400)
	4 byte float (DPT 14.x)	-9,2233720E+18 ... 9,2233720E+18 (400)
	4 byte counter (DPT 12.x)	0 ... 4294967295 (400)
	4-byte counter with sign (DPT 13.x) (without decimal place)	-2147483648 ... 2147483647 (400)

Channel: Safety function		
Values for active	1Bit (DPT 1.001)	0 ... 1 (1)
	1 byte Percent (DPT 5.001)	0 ... 100 (60)
	1 byte counter (DPT 5.010)	0 ... 255 (50)
	1 byte counter with sign (DPT 6.010)	-128 ... 127 (50)
	2 byte float (DPT 9.x)	-671088,64 ... 670433,28 (500)
	2 byte counter (DPT 7.x)	0 ... 65535 (500)
	2-byte counter with sign (DPT 8.x)	-32768 ... 32767 (500)
	4 byte float (DPT 14.x)	-9,2233720E+18 ... 9,2233720E+18 (500)
	4 byte counter (DPT 12.x)	0 ... 4294967295 (500)
	4-byte counter with sign (DPT 13.x) (without decimal place)	-2147483648 ... 2147483647 (500)

The result of the active safety function can be selected. „No reaction“ at the start of the safety function means that the current result, which was available when the safety function was activated, is frozen during blocking.

Channel: Safety function	
Action at the start of the safety function	"0"
	"1"
	no reaction

The result can also be defined when the safety function is removed. This value is passed on to the higher-level function when it is removed. In the „no reaction“ setting, the current result of the safety function remains unchanged. Only an input event updates the result. With „follows subordinate status“, the safety function determines a new result based on the subordinate functions.


If the result of the safety function is „1“ when the safety function is removed, the run-on time is started for an automatic staircase controller. For staircase controllers with switch-on delay, the switch-on delay is ignored.

Channel: Safety function	
Value of the basic function on removal the safety function (no priority active)	"0"
	"1"
	no reaction
	follows subordinate status

The security function can be monitored cyclically. If the device does not respond, a „no response“ fault message is entered in the event memory.

Channel: Safety function > Cyclical monitoring <small>(visible if "Cyclical monitoring" is activated)</small>	
Monitoring time in minutes	1-255 [10]

You can specify whether the safety function should be activated or remain **deactivated** after bus voltage recovery.


NOTE	
	<ul style="list-style-type: none"> Activation and deactivation are instantaneous, i.e. parameterized delay times are ignored. If the disable function is activated, current delay times and run-on times are deleted from the basic functions.



LUXOMAT[®] net Switching actuator KNX RF Secure

No.	Name	Function	C	R	W	T	M
7	K: Input (DPT1.001)	Safety	X	-	X	-	-
7	K: Input (DPT5.001)	Safety	X	-	X	-	-
7	K: Input (DPT5.010)	Safety	X	-	X	-	-
7	K: Input (DPT6.010)	Safety	X	-	X	-	-
7	K: Input (DPT9.x)	Safety	X	-	X	-	-
7	K: Input (DPT7.x)	Safety	X	-	X	-	-
7	K: Input (DPT8.x)	Safety	X	-	X	-	-
7	K: Input (DPT14.x)	Safety	X	-	X	-	-
7	K: Input (DPT12.x)	Safety	X	-	X	-	-
7	K: Input (DPT13.x)	Safety	X	-	X	-	-

8 Output / relay behavior

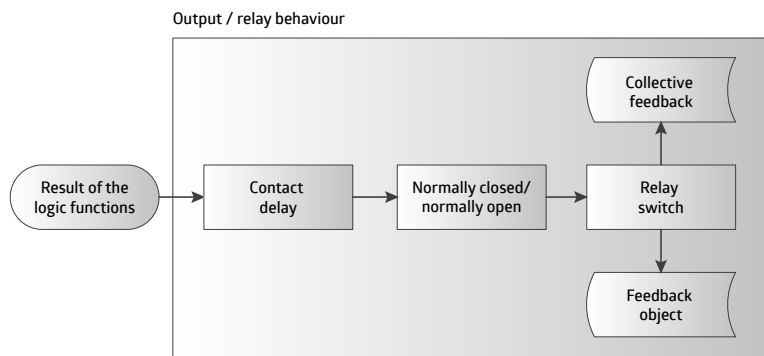

8.1 Contact delay function

The contact delay function is used to protect against overloads in the power grid. Channels can be switched simultaneously using the central object. The simultaneous switching of many loads can lead to a brief overload of the power grid. The contact delay function is used to rectify this problem. The switching command is only sent to the relay after a delay time has elapsed. These delay times should not be confused with the switch-on and switch-off delays. They are significantly shorter.

With the contact delay function, it is also possible to prioritize the switching channels. If, for example, all channels are to be switched on by a central command, the shortest contact delay time determines which channel is to switch first.

Channel: Output / relay behavior	
Contact delay function	deactivated activated
Contact delay when switching on (fff = milliseconds) mm:ss.fff (visible if activated)	00:00.010 – 10:00.000 [00:00.100]
Contact delay when switching off (fff = milliseconds) mm:ss.fff (visible if activated)	00:00.010 – 10:00.000 [00:00.100]

8.2 Contact type

For the channel, the contact type parameter can be used to define whether the relay should behave like a normally open contact (NO: normally open) or a normally closed contact (NC: normally closed). In the case of a normally closed contact, the value determined by the basic function and the logic functions is inverted.

Channel: Output / relay behavior	
Contact type	NO contact (NO) Normally closed contact (NC)

8.3 Feedback

The actuator switches the switching contact as soon as the basic and logic functions result in a switching command. The feedback object is then also generated.

The type of feedback can be defined here (active feedback object / passive status object).

Channel: Feedback (visible if feedback has been activated)	
Feedback, 1-bit	deactivated
	active feedback object
	passive status object

For the channel, it is possible to report back the status via a collective feedback via a 1-bit object. You can select whether a channel should be included in the collective feedback.

Channel: Feedback (visible if feedback has been activated)	
Channel for collective feedback	deactivated
	activated

The feedback value depends on the status of the switching contact. Either the original status (closed = „1“ / open = „0“) or the inverted value (closed = „0“ / open = „1“) can be sent. This applies to both individual and collective feedback.

K: Feedback (visible when detected via relay status)	
Feedback when relay is open	„0“
	„1“
	no reaction
Feedback for closed relays	„0“
	„1“
	no reaction

No.	Name	Function	C	R	W	T	M
10	K: Output (DPT 1.001)	Feedback	X	-	-	X	-

9 List of data point types

Channel 1

No.	DPT	Designation	Size	C	R	W	T	M
1	K: Input - (DPT 1.001)	Switching	1 bit	X		X		
2	K: Input - (DPT 18.001)	Scene	1 byte	X		X		
3	K: Input (DPT 1.001)	Logic operation 1	1 bit	X		X		
3	K: Input (DPT 5.001)	Logic operation 1	1 byte	X		X		
3	K: Input (DPT 5.010)	Logic operation 1	1 byte	X		X		
3	K: Input (DPT 6.010)	Logic operation 1	1 byte	X		X		
3	K: Input (DPT 9.x)	Logic operation 1	2 byte	X		X		
3	K: Input (DPT 7.x)	Logic operation 1	2 byte	X		X		
3	K: Input (DPT 8.x)	Logic operation 1	2 byte	X		X		
3	K: Input (DPT 14.x)	Logic operation 1	4 byte	X		X		
3	K: Input (DPT 12.x)	Logic operation 1	4 byte	X		X		
3	K: Input (DPT 13.x)	Logic operation 1	4 byte	X		X		
4	K: Input (DPT 1.001)	Logic operation 2	1 bit	X		X		
4	K: Input (DPT 5.001)	Logic operation 2	1 byte	X		X		
4	K: Input (DPT 5.010)	Logic operation 2	1 byte	X		X		
4	K: Input (DPT 6.010)	Logic operation 2	1 byte	X		X		
4	K: Input (DPT 9.x)	Logic operation 2	2 byte	X		X		
4	K: Input (DPT 7.x)	Logic operation 2	2 byte	X		X		
4	K: Input (DPT 8.x)	Logic operation 2	2 byte	X		X		
4	K: Input (DPT 14.x)	Logic operation 2	4 byte	X		X		
4	K: Input (DPT 12.x)	Logic operation 2	4 byte	X		X		
4	K: Input (DPT 13.x)	Logic operation 2	4 byte	X		X		
5	K: Input - (DPT 1.001)	Lock	1 bit	X		X		
5	K: Input (DPT 5.001)	Lock	1 byte	X		X		
5	K: Input (DPT 5.010)	Lock	1 byte	X		X		
5	K: Input (DPT 6.010)	Lock	1 byte	X		X		
5	K: Input (DPT 9.x)	Lock	2 byte	X		X		
5	K: Input (DPT 7.x)	Lock	2 byte	X		X		
5	K: Input (DPT 8.x)	Lock	2 byte	X		X		
5	K: Input (DPT 14.x)	Lock	4 byte	X		X		
5	K: Input (DPT 12.x)	Lock	4 byte	X		X		
5	K: Input (DPT 13.x)	Lock	4 byte	X		X		
6	K: Input (DPT 2.001)	Forced operation	2 Bit	X		X		
7	K: Input (DPT 1.001)	Safety	1 bit	X		X		
7	K: Input (DPT 5.001)	Safety	1 byte	X		X		
7	K: Input (DPT 5.010)	Safety	1 byte	X		X		
7	K: Input (DPT 6.010)	Safety	1 byte	X		X		
7	K: Input (DPT 9.x)	Safety	2 byte	X		X		
7	K: Input (DPT 7.x)	Safety	2 byte	X		X		
7	K: Input (DPT 8.x)	Safety	2 byte	X		X		
7	K: Input (DPT 14.x)	Safety	4 byte	X		X		
7	K: Input (DPT 12.x)	Safety	4 byte	X		X		
7	K: Input (DPT 13.x)	Safety	4 byte	X		X		
8	K: Input (DPT 7.005)	Switch-on delay time	2 byte	X		X		
9	K: Input (DPT 7.005)	Switch-off delay time	2 byte	X		X		
9	K: Input (DPT 7.005)	Follow-up time	2 byte	X		X		
10	K: Output (DPT 1.001)	Feedback	1 bit	X			X	
11	K: Input (DPT 13.100)	Operating hours limit	4 byte	X		X		
12	K: Input (DPT 1.001)	Reset operating hours	1 bit	X		X		
13	K: Output (DPT 1.001)	Operating hours achieved	1 bit	X			X	
14	K: Output (DPT 13.100)	Operating hours	4 byte	X			X	
15	K: Input (DPT 12.001)	Switching cycles Limit	4 byte	X			X	
16	K: Input (DPT 1.001)	Reset switching cycles	1 bit	X		X		
17	K: Output (DPT 1.001)	Switching cycles achieved	1 bit	X			X	
18	K: Output (DPT 12.001)	Switching cycles	4 byte	X			X	



LUXOMAT[®] net Switching actuator KNX RF Secure

General

No.	DPT	Designation	Size	C	R	W	T	M
19	General: Input	Central switching	1 bit	X		X		
20	General: Input	Actuator reset	1 bit	X		X		
21	General: Output	Collective feedback 1	4 bytes	X			X	
21	General: Output	Collective feedback 2	4 bytes	X	X			
23	General: Output	Commissioning telegram	1 bit	X			X	

10 Care, maintenance and disposal

10.1 Cleaning

If necessary, clean the surface of the device with a soft, lint-free cloth.

NOTE



Do not use aggressive cleaners!

- Do not use aggressive cleaning agents such as thinner or acetone to clean the device.
- Only use a fibre-free cloth for cleaning.
- Pointed and hard objects can destroy the device.

10.2 Maintenance

The device does not normally require maintenance by the operator. Repairs to the devices may only be carried out by the manufacturer.

For repairs, contact your responsible B.E.G. Brück Electronic branch or directly B.E.G. Brück Electronic GmbH, Germany.

10.3 Disposal

Observe the nationally applicable regulations for electrotechnical components when disposing of them..

11 Diagnosis / Troubleshooting

NOTE

Diagnosis / troubleshooting via the ETS!



→ For diagnosis / troubleshooting, use the corresponding functions of the ETS, e.g.

- Group monitor
- Bus monitor
- Line scan



12 Service / Support

12.1 Manufacturer's warranty

The company B.E.G. Brück Electronic GmbH grants a warranty in accordance with the warranty conditions, which you can download from the website at <https://www.B.E.G.-luxomat.com/service/downloads/>.

12.1.1 Product code

The product is provided with a product code which enables the product to be traced in the event of a guarantee/complaint.

The product code is lasered on the housing. For the exact placement, please refer to the enclosed manual.

12.2 Contact details

Service hotline:

+49 (0)2266 90121-0

Monday to Thursday 8.00 to 16.00 (UTC+1)

Friday 8.00 to 15.00 (UTC+1)

E-mail:

support@beg.de

Return address for repairs:

Contact your B.E.G. branch or agency.

You can find the contact details at <https://www.beg-luxomat.com/en-in/service/service-points/>.

Or contact directly

B.E.G. Brück Electronic GmbH

Gerberstrasse 33

51789 Lindlar

GERMANY



B.E.G. Brück Electronic GmbH
Gerberstraße 33
51789 Lindlar

T +49 (0) 2266 90121-0

support@beg.de
beg-luxomat.com