



Manuale rapido

B.E.G. LUXOMAT® net



DALI LINK Einzelraumlösung / Single Room Solution / Solution pièce individuelle
STARTERSET-DALI LINK SMALL-OFFICE* - 93840

*Starterset und DALI-Geschäfte nicht enthalten. *Starterset und DALI-Geschäfte nicht enthalten. *Starterset et magasins DALI ne pas inclure




DALI LINK STARTERSET


1.1. Leggere le istruzioni!




1.2. Accertarsi che il collegamento DALI rispetti le configurazioni conformi !




Bus

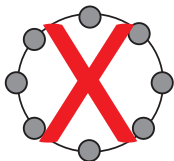


Ring

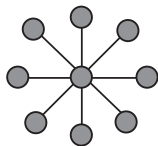

Star

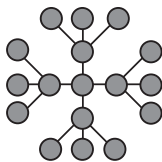

Extended Star

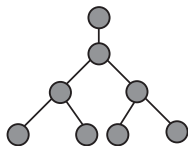


Hierarchical



Mesh

1.3. Utilizzare cavi elettrici conformi alla normativa vigente. Non utilizzare cavi schermati !

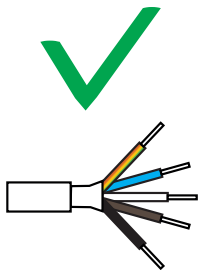

NYM-J (1,5mm² / 2,5mm²)






J-Y(ST)Y




2.1. ■ Scaricare l'APP gratuita ed installarla nel proprio SmartPhone / Tablet






2.2. Aprire l'APP e selezionare la lingua !

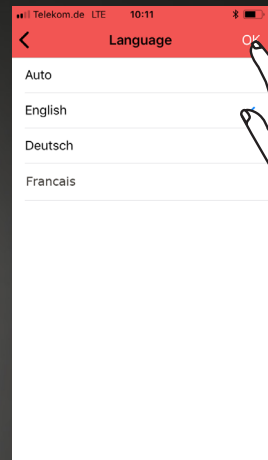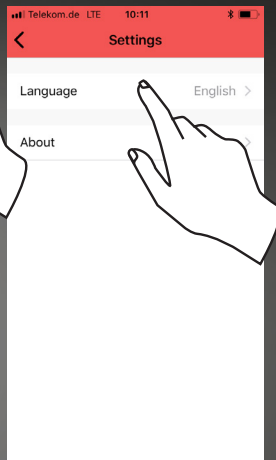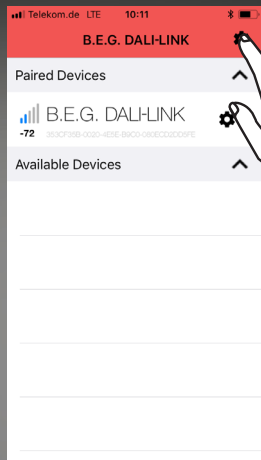




2.3. E' possibile assegnare un nome alla stanza o alla zona !

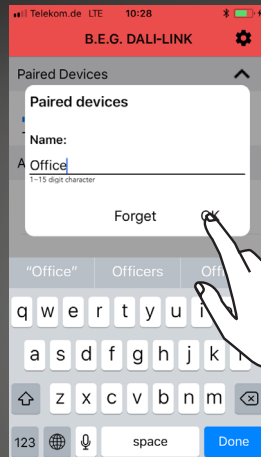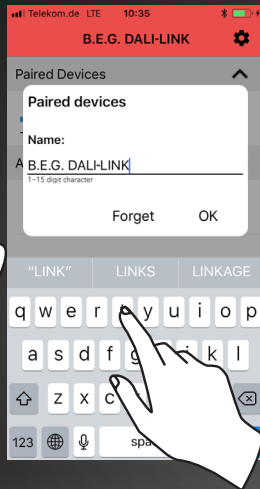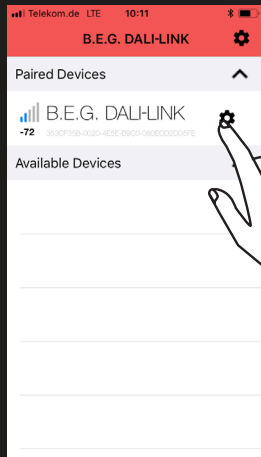



2.4. Digitare il numero di default «123456» per attivare la connessione !

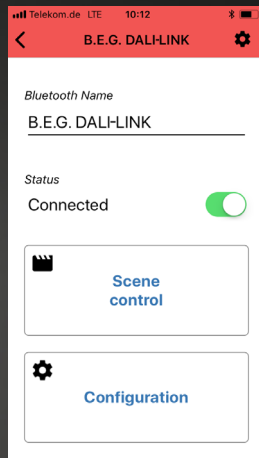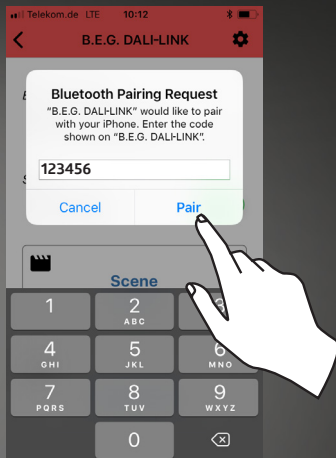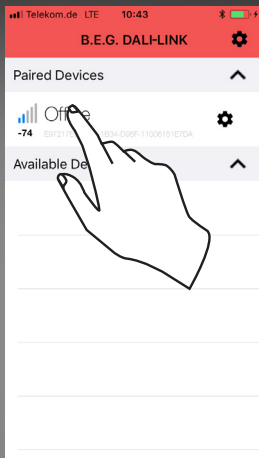



2.5. E' possibile modificare la password !

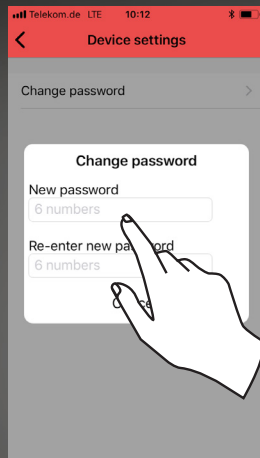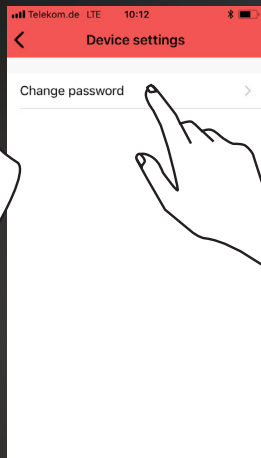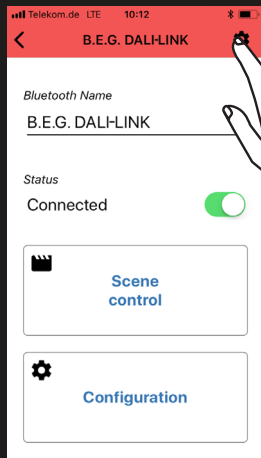




2.6. Attivare la configurazione attraverso il QR-Code presente sull'interfaccia pulsanti Blue Tooth !

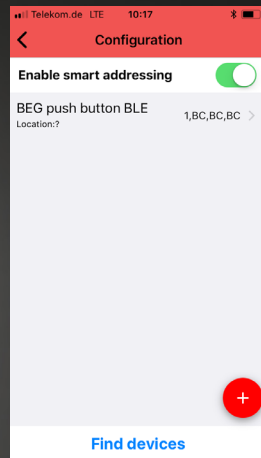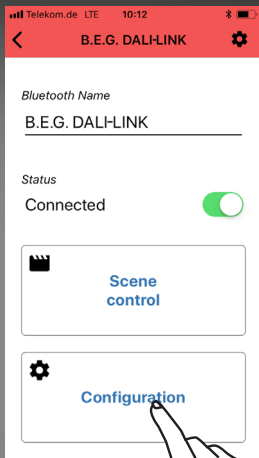




3.1. Attivare la ricerca dei dispositivi DALI collegati !

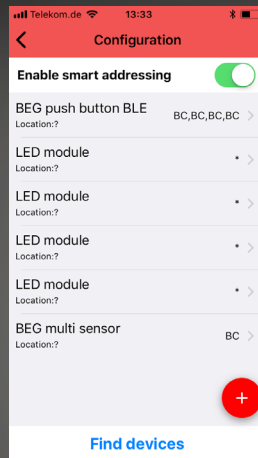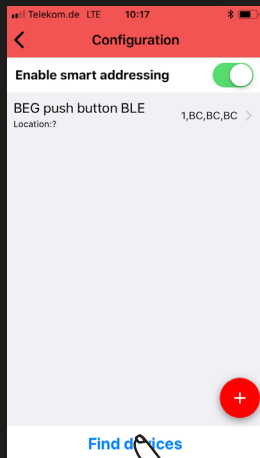




3.2. E' possibile nominare ogni dispositivo DALI e creare i gruppi di funzionamento !

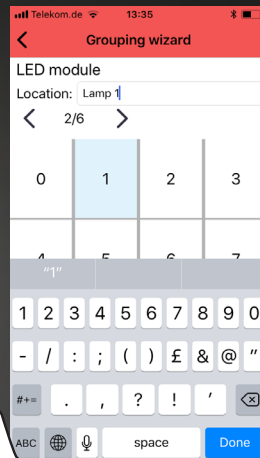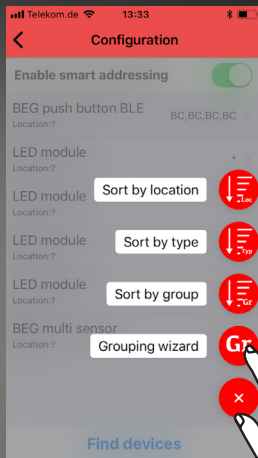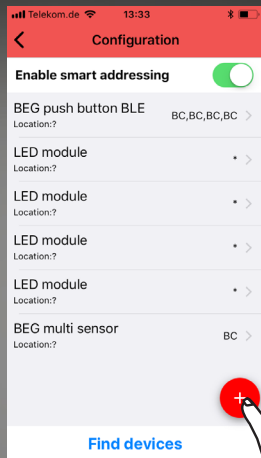




3.3. E' possibile modificare i parametri di funzionamento presenti in ogni dispositivo DALI a piacimento !

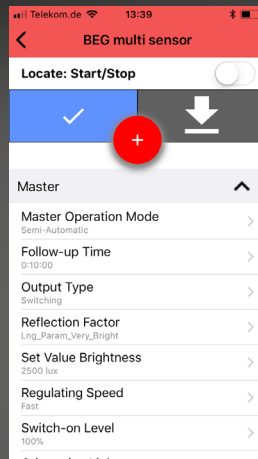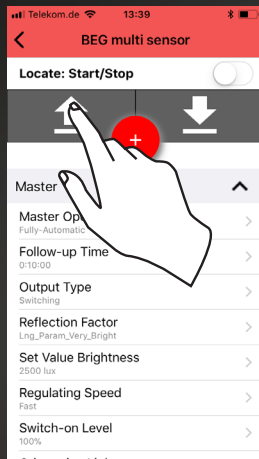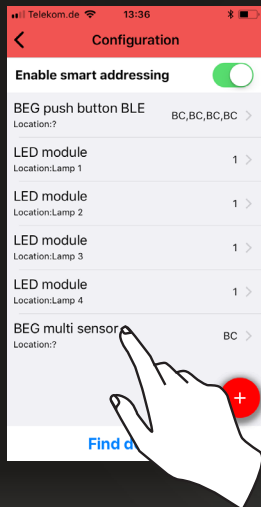




4.1. Creare e configurare gli scenari di funzionamento !

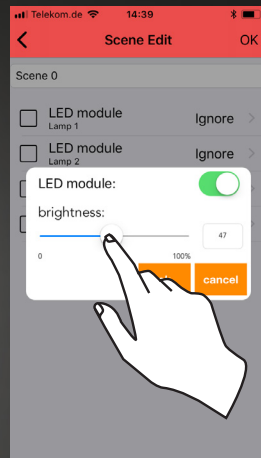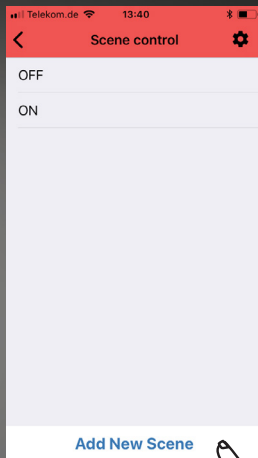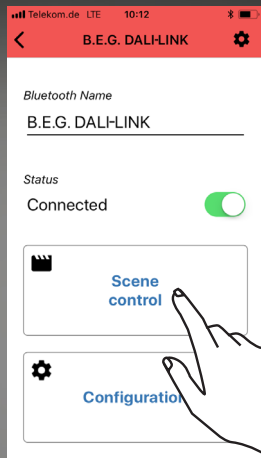


4.2. Modifica o elimina le scene o gli scenari !

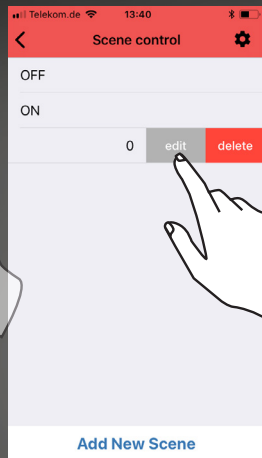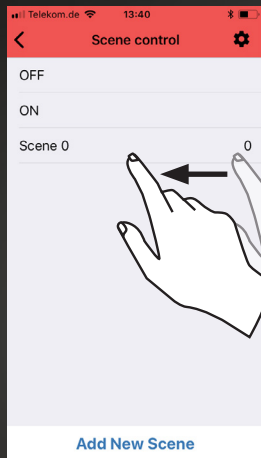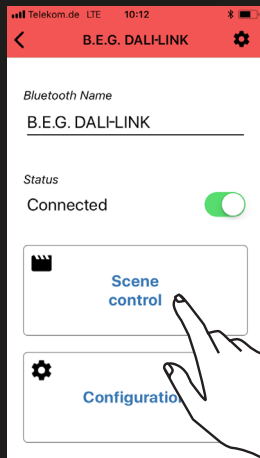

5.1. Avvisi di errore!

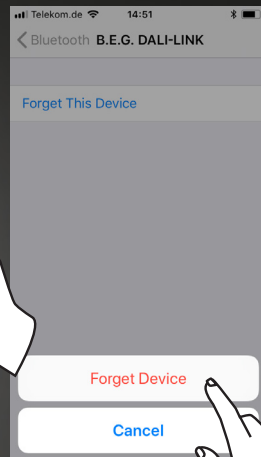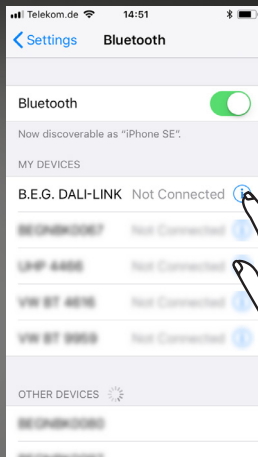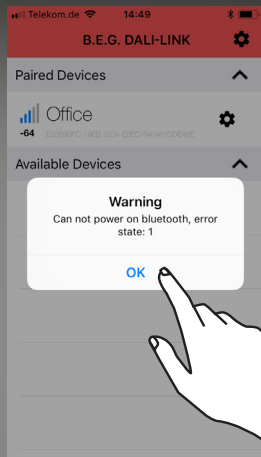

6.1. Per maggiori informazioni del sistema visita (beg-luxomat.com/it/soluzioni/dali-link/)!

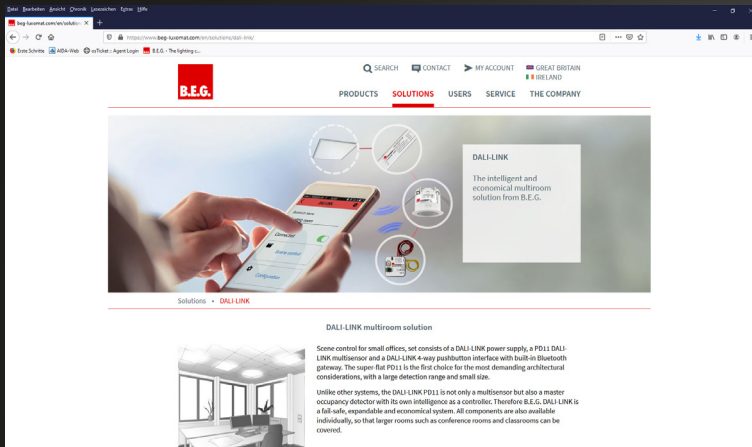

The screenshot shows a web browser window displaying the B.E.G. website. The page is titled "SOLUTIONS" and features a navigation menu with "PRODUCTS", "SOLUTIONS", "USERS", "SERVICE", and "THE COMPANY". The main content area is titled "DALI-LINK" and describes it as "The intelligent and economical multiroom solution from B.E.G.". Below this, there is a section titled "DALI-LINK multiroom solution" which includes a photograph of a modern office interior and a detailed description of the system components and its benefits.

B.E.G.

SEARCH CONTACT MY ACCOUNT GREAT BRITAIN IRELAND

PRODUCTS SOLUTIONS USERS SERVICE THE COMPANY

DALI-LINK


The intelligent and economical multiroom solution from B.E.G.

Solutions - DALI-LINK

DALI-LINK multiroom solution

Scene control for small offices, set consists of a DALI LINK power supply, a PD11 DALI-LINK multisensor and a DALI-LINK 4-way pushbutton interface with built-in Bluetooth gateway. The super flat PD11 is the first choice for the most demanding architectural considerations, with a large detection range and small size.

Unlike other systems, the DALI LINK PD11 is not only a multisensor but also a master occupancy detector with its own intelligence as a controller. Therefore B.E.G. DALI LINK is a fail-safe, expandable and economical system. All components are also available individually, so that larger rooms such as conference rooms and classrooms can be covered.

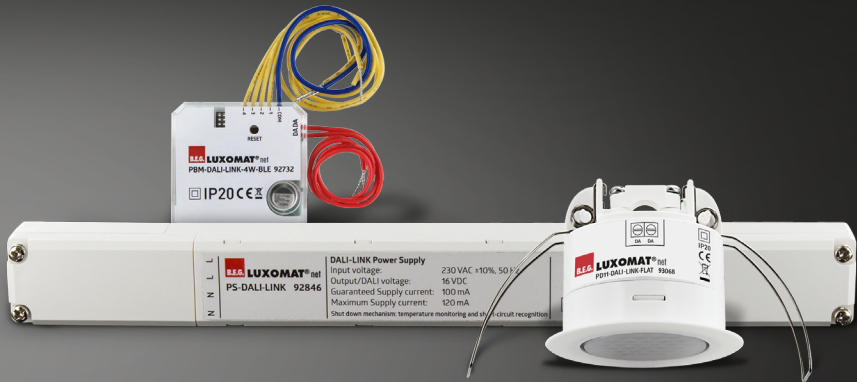

RESISTOR
1 2 3 4 5 6 7 8 9 10
DALI
RESET

REG LUXOMAT® net
PBM-DALI-LINK-4W-BLE 92732

IP20 CE

L
N
N

REG LUXOMAT® net
PS-DALI-LINK 92846

DALI-LINK Power Supply
Input voltage: 230 VAC ±10%, 50 Hz
Output/DALI voltage: 16 VDC
Guaranteed Supply current: 100 mA
Maximum Supply current: 120 mA
Shut down mechanism: temperature monitoring and short-circuit recognition

REG LUXOMAT® net
PDM-DALI-LINK-FLAT 93048

IP20
DALI
CE



B.E.G. Italia S.R.L.

Viale Brianza 181
20092 Cinisello B.mo (MI)

T +39 02 4979 5563

info@beg.de
beg-luxomat.com